

Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.Introduction

E30-433TBL-01 is a set of test kits formed by serial SMD serial port module combined with USB to TTL serial port for customers testing and development, which greatly reduces the difficulty of testing and development.

About more details, please refer to manual of module E30-433T20S3.

1.1. Size and Pin Definition

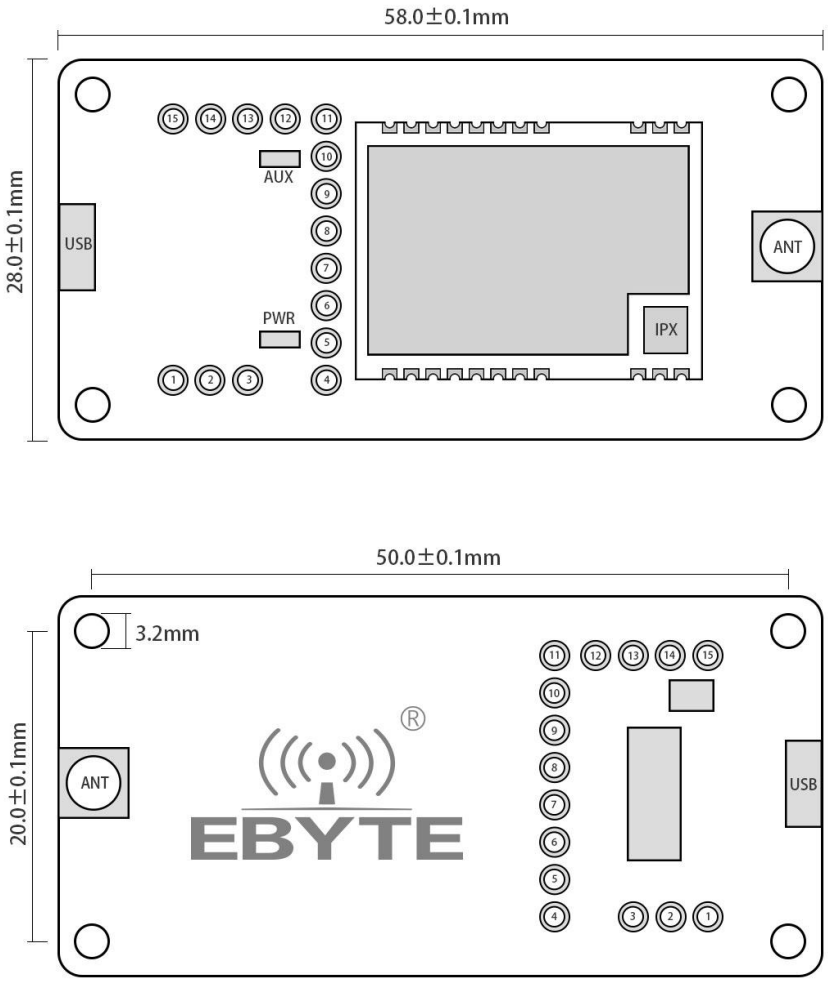

No	Value	Function
1	5V	Jumper short connected with VCC for power input
2	VCC	Power input
3	3.3V	Jumper short connected with VCC for power input

Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4	GND	Ground
5	VCC	Power input
6	NC1	/
7	NC2	/
8	NC3	/
9	RXD	RXD , to connect TXD of module for test
10	TXD	TXD , to connect RXD of module for test
11	AUX	Check more from manual of E30 module
12	M1	Pin M1 for mode selection, suspending means "1", when short connected with GND.it is “0”
13	GND	Ground. often work with M1
14	M0	Pin M0 for mode selection, suspending means "1", when short connected with GND.it is “0”
15	GND	Ground. often work with M0

2.Quick Start

1.2. Test preparation

2.11 Install driver

Download driver program CH34ISER EXE from Ebyte website , double click to install.The driver program supports 32/64 bit Windows 10/8.1/8/7/VISTA/XP,SERVER2016/2012/2008/2003,2000/ME/98, with software digital signature authentication, good for USB to 3-wire and 9-wire serial port connection.

2.12 Connect to hardware

Prepare Micro USB cable, antenna, connect them to test board E30-433TBL-01, open corresponding serial port.


Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.13 Communication in Mode 0



As shown above connect to jumpers(5V power supply, mode 0), both E30-433TBL-0 are configured this way, open serial port, for data TX and RX, and AUX indicator is blinking.

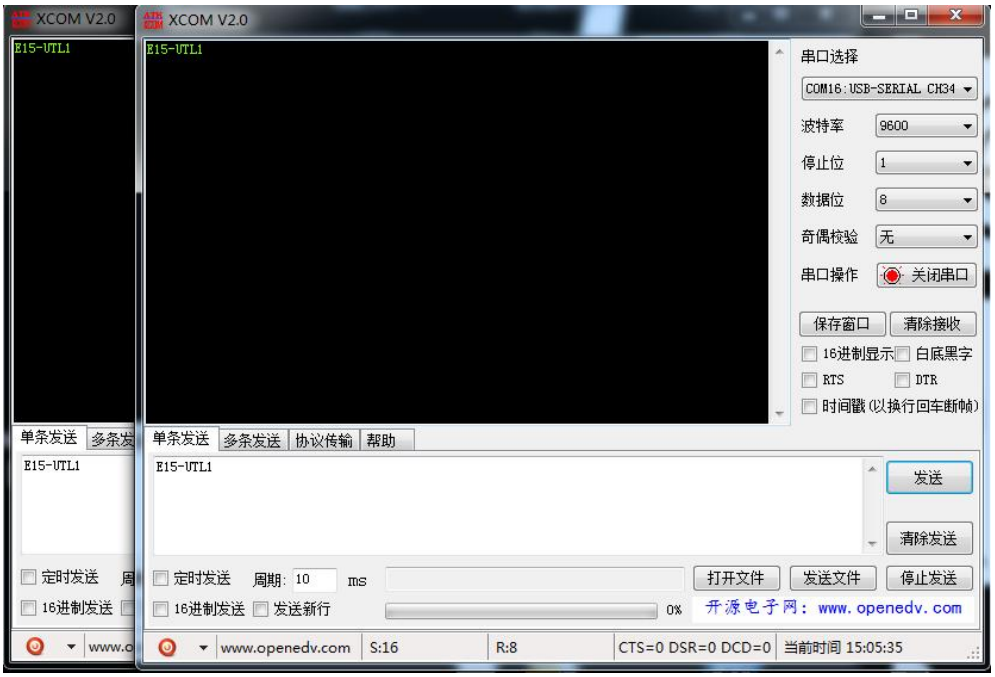

Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3. Other mode



As shown above, connect to jumpers (5V power supply, mode 1) see function details from E30 UART module manual.



As shown above connect to jumpers (5V power supply mode 2), see function details from E30 UART module manual.



Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

As shown above, connect to jumpers (5V power supply mode 3), see function details from E30 UART module manual.

About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: https://www.cdebyte.com

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

---

Fax: 028-64146160 Web:https://www.cdebyte.com

Address: B5 Mould Industrial Park, 199# Xiqu Ave, High tech Zone, Chengdu, Sichuan, China



Copyright ©2012 – 2020，Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000