E22P-xxxMBX-SC Series Evaluation Kit User Manual

Next-generation package-compatible Sub-1G wireless module kit



Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 PRODUCT OVERVIEW 2

1.1 PRODUCT INTRODUCTION 2
1.2 PIN DEFINITIONS 2
1.3 FUNCTION INTRODUCTION 3
1.4 PARAMETER INTRODUCTION 3
1.5 COMPATIBILITY LIST 4
1.6 PROGRAM DOWNLOAD INTERFACE 5

2 SOFTWARE INTRODUCTION 6

2.1 DEVELOPMENT ENVIRONMENT 6
2.2 DIRECTORY STRUCTURE 7

3 FUNCTION DEMONSTRATION 8

3.1 QUICK START 8
3.2 IMPLEMENT PASS-THROUGH FUNCTION VIA USB SERIAL PORT 11
3.3 IMPLEMENTING HOST COMPUTER CONFIGURATION FUNCTION VIA USB SERIAL PORT 12

4 FREQUENTLY ASKED QUESTIONS 13

4.1 TRANSMISSION DISTANCE IS NOT IDEAL 13
4.2 MODULE IS EASILY DAMAGED 13
4.3 THE ERROR RATE IS TOO HIGH. 13

REVISION HISTORY 14

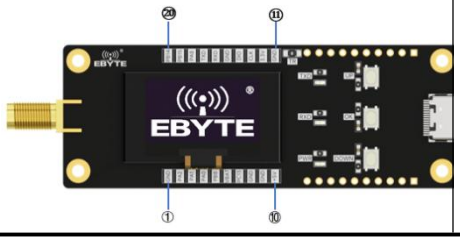
ABOUT US 14

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Product Overview

1.1 Product Introduction

	model	front	back
High-power kit	**E22P-xxxMBH-SC①**		

The SC series evaluation kit is designed to help users quickly evaluate Ebyte's next-generation package-compatible wireless modules. The MCU uses the STM32F103C8T6, with all available pins brought out to the side headers. Developers can easily connect various peripheral devices via jumpers according to their needs, facilitating secondary development.

This kit provides complete software application examples to help customers quickly get started with wireless data communication development. Different types of Sub -1G wireless modules can be onboard to meet customer needs. All supported modules have pin-compatible packages for quick replacement.

E22P-xxxMBH-SC①：E22P-433MBH-SC、E22P-868MBH-SC、E22P-915MBH-SC.

1.2 Pin Definitions

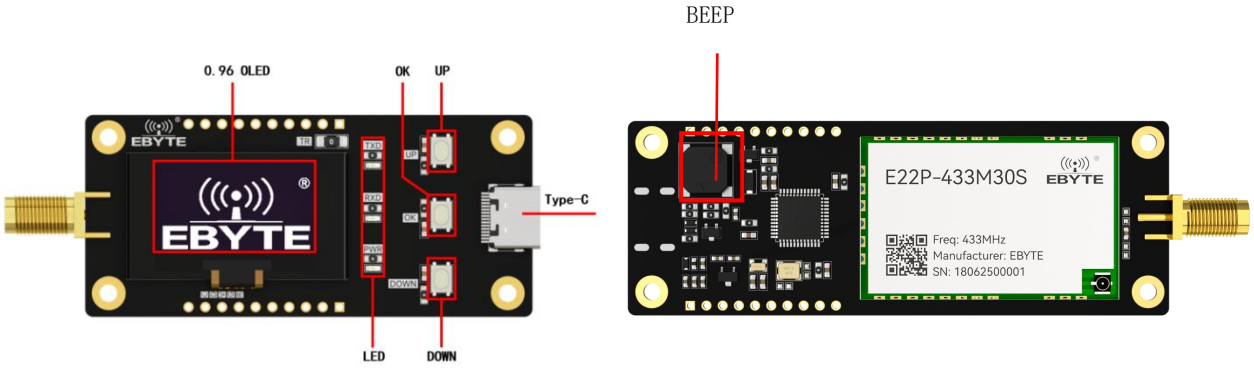
E22P-xxxMBH-SC		
Pin number	definition	Function Description
1	GND	Base plate ground wire
2	PA2	MCU_PA2 pin
3	PA1	MCU_PA1 pin
4	PA0	MCU_PA0 pin
5	PB8	MCU_PB8 pin
6	VBAT	MCU_VBAT pin
7	PC13	MCU_PC13 pin
8	GND	Base plate ground wire
9	GND	Base plate ground wire
10	+5V	5V power supply interface
11	GND	Base plate ground wire
12	3.3V	3.3V power supply interface
13	CLK	SWCLK
14	DIO	SWDIO
15	GND	Base plate ground wire
16	RXD	MCU_RXD data input pin
17	TXD	MCU_TXD data output pin
18	PA8	MCU_PA8 pin

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

19	PB15	MCU_PB15 pin
20	PB14	MCU_PB14 pin

1.3 Function Introduction



Display screen	0.96 OLED	Displays current configuration, test parameters, and version information, etc.
button	Up	The up arrow key is used to select or add points; continuous clicking is supported when setting frequency and power.
	Confirm/OK	Press the confirmation button to proceed to the next page or exit to the last page.
	Down	The down arrow key is used to select or decrease the frequency; continuous clicking is supported when setting frequency and power.
indicator lights	TXD	The transmit indicator light flashes once for each transmission.
	RXD	The receiver indicator light flashes once for each received signal.
	PWR	The power indicator light stays on when the power is on.
Test resistance	TR	Remove the test resistor and connect an ammeter in series to test the module current.
buzzer	BEEP	A beep sounds once when the button is pressed.

1.4 Parameter Introduction

Serial Number	Parameter name	Parameter value	Notes
		MBH-SC	
1	Test board size	30*85mm	-
2	Production process	Lead-free process, machine mounting	Machine-applied stamping ensures batch consistency and reliability.
3	Antenna Interface	SMA	-
3	Power interface	Type-C	USB to Type-C

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4	Operating temperature	-40 ~ +85℃	-
5	Operating humidity	10% ~ 90%	-
6	Storage temperature	-40 ~ +125℃	-

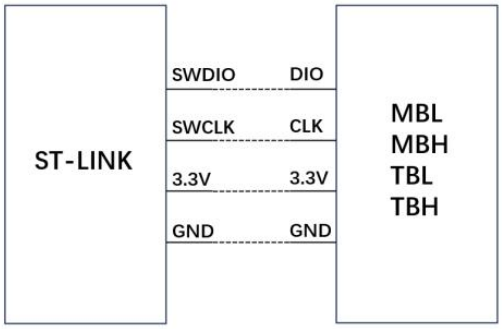
1.5 Compatibility list

Low power module	SPI	1	E22-400M22S	E22-400/900MBL-SC
		2	E22-900M22S	
		3	E32-400M20S	E32-400/900MBL-SC
		4	E32-900M20S	
		5	E220-400M22S	E220-400/900MBL-SC
		6	E220-900M22S	
	UART	7	E22-400T22S	E22-400/900TBL-SC
		8	E22-900T22S	
		9	E32-433T20S	E32-433/900TBL-SC
		10	E32-900T20S	
		11	E220-400T22S	E220-400/900TBL-SC
		12	E220-900T22S	
High power module	SPI	13	E22-400M30S	E22-400/900MBH-SC
		14	E22-900M30S	
		15	E32-400M30S	E32-400/900MBH-SC
		16	E32-900M30S	
		17	E220-400M30S	E220-400/900MBH-SC
		18	E220-900M30S	
		19	E290-400M20S(3060)	EWT290-400MB L -SC
		20	E290-400M20S(3029)	
		21	E290-400M30S(3029)	EWT290-400MBH-SC
		22	E290-400M30S(3060)	
		23	E22P-433M30S	E22 P - 433 MBH-SC
		24	E22P-868M30S	E22 P - 868 MBH-SC
		25	E22P-915M30S	E22 P - 915 MBH-SC
	UART	26	E22-400T30S	E22-400/900TBH-SC
		27	E22-900T30S	
		28	E32-433T30S	E32-433/900TBH-SC
		29	E32-900T30S	
		30	E220-400T30S	E220-400/900TBH-SC
		31	E220-900T30S	

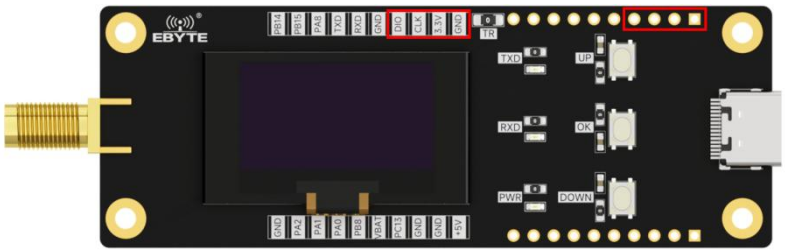
Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.6 Program Download Interface



Taking the M series as an example, the E22P-433MBH-SC



The MCU can be programmed via ST-LINK. Please compile the program before programming.



Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Software Introduction

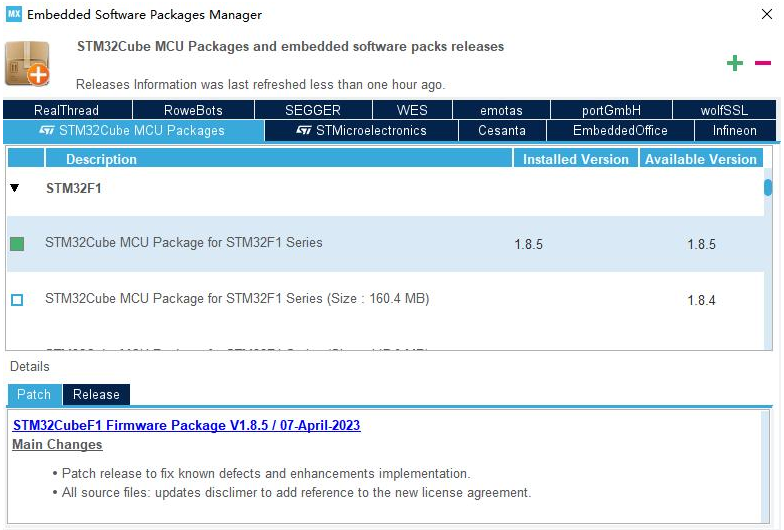
2.1 Development Environment

2.1.1 STM32CubeMX

Recommended tool version: ≥v6.9.2



STM32 firmware version ≥ v1.8.5



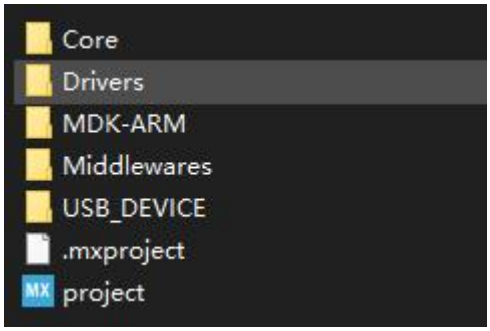
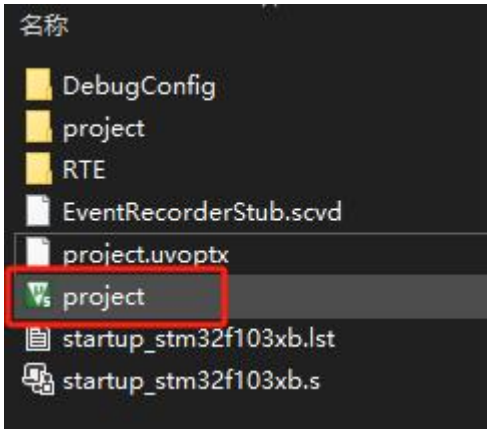
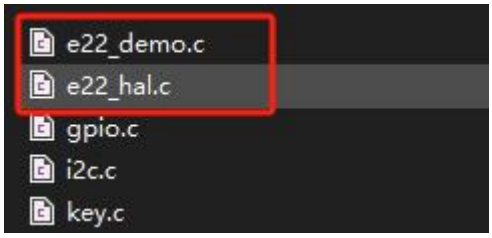
2.1.2 MDK-ARM

Keil version ≥ v5.31.0



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Directory Structure

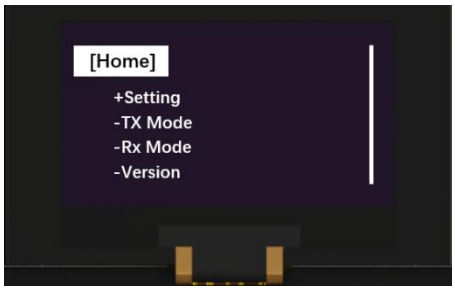
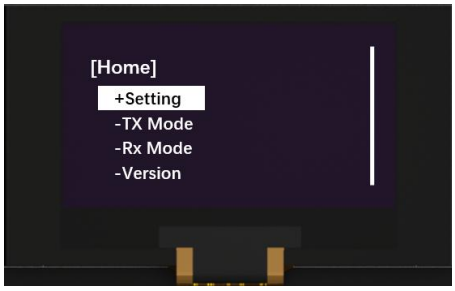
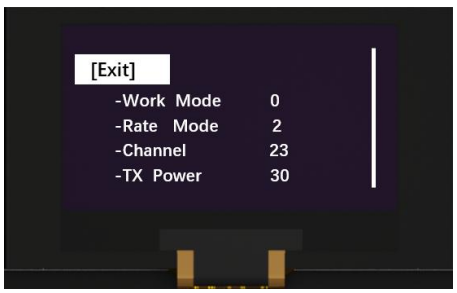
	matter	illustrate
1	File Directory	The sample project can be downloaded from the official website. The directory is shown in the image below. 
2	Project Launch	The MDK-ARM folder contains the startup files. 
3	Module driver	The Drivers folder contains the corresponding RF chip drivers for SX126X/SX127X/LLCC68, etc. 
4	Module application	The Core/Src folder contains the corresponding exx_demo example. 

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

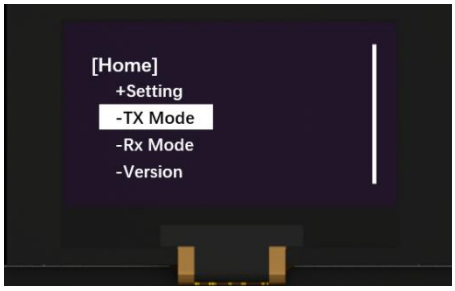
3 Function Demonstration

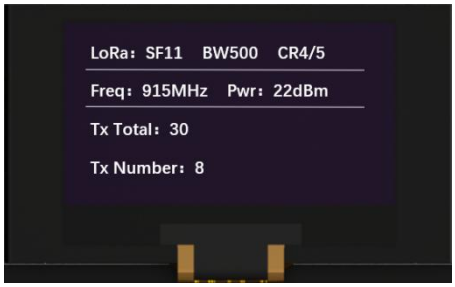
3.1 Quick Start

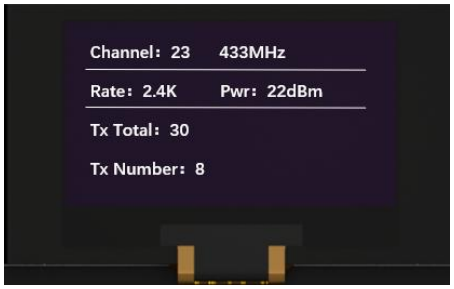
	matter	illustrate
1	front page	Upon power-on, the system will default to the home page, and all configuration parameters will be restored to their default settings. 
2	Enter page	Clicking the physical confirmation button will take you to the corresponding options page. 
3	Basic parameter settings	The M-series setting page offers various LoRa parameters that can be adjusted as needed. For airspeed calculation, it is recommended to use the official Semtech LoRa calculation tool. The only difference between the T-series and M-series is the airspeed configuration. After configuration, select [Exit] to confirm and return to the previous page.  The M series configuration is as follows: The T series configuration is as follows:   Functional explanation:

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

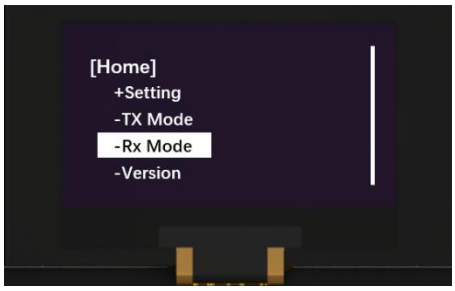
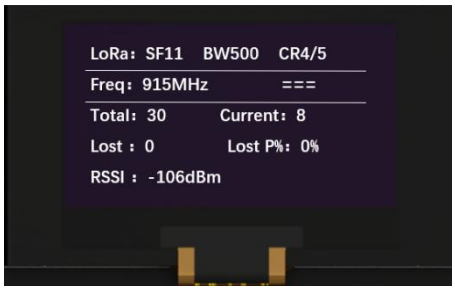
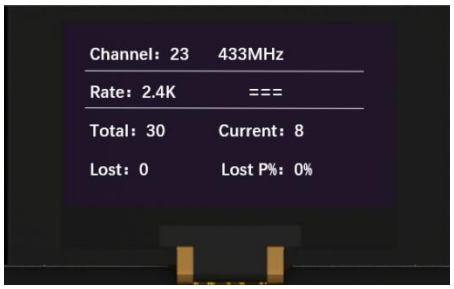
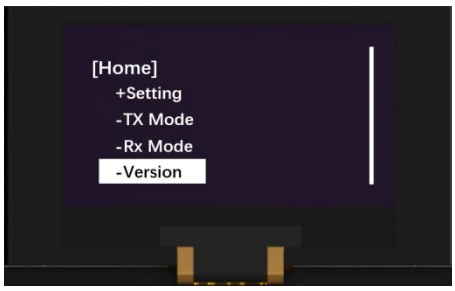
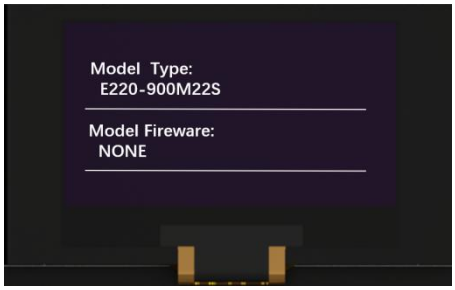
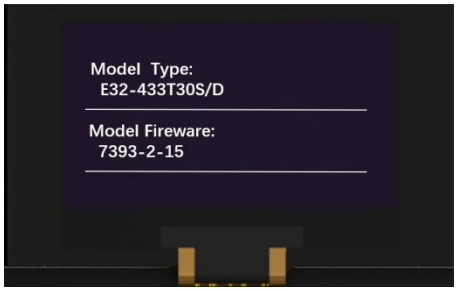
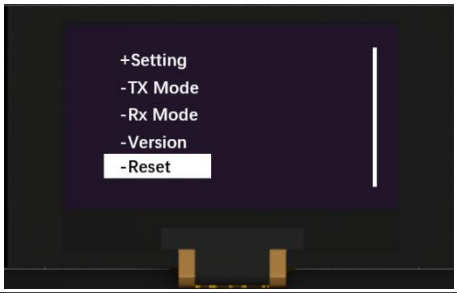
<table>
<tr><td></td><td></td><td>
<table>
<tr><th colspan="3">M series</th><th colspan="3">T series</th></tr>
<tr><td>LoRa SF</td><td>Symbol rate</td><td rowspan="3">Airspeed needs to be calculated in conjunction with SF, BW, and CR.</td><td>Work Mode</td><td>Work mode</td><td>Select module working mode</td></tr>
<tr><td>LoRa BW</td><td>Channel bandwidth</td><td>Rate Mode</td><td>Rate mode</td><td>Select airspeed</td></tr>
<tr><td>LoRa CR</td><td>Encoding rate</td><td>Channel</td><td>Working Channel</td><td>Select Channel</td></tr>
<tr><td>Frequency</td><td>Operating frequency</td><td>Select frequency point</td><td>TX Power</td><td>Transmit power</td><td>Configure transmission power</td></tr>
<tr><td>TX Power</td><td>Transmit power</td><td>Configure transmission power</td><td>TX Count</td><td>Number of times sent</td><td>Configure the number of sends</td></tr>
<tr><td>TX Count</td><td>Number of times sent</td><td>Configure the number of sends</td><td>Back Color</td><td>Background color</td><td>Reverse display screen background color</td></tr>
<tr><td>Back Color</td><td>Background color</td><td>Reverse display screen background color</td><td></td><td></td><td></td></tr>
</table>
</td></tr>
<tr><td>4</td><td>Send test</td><td>Once Tx Mode is entered, it will automatically start sending data packets according to the user-defined parameters (default 10 bytes per packet).
Press the "OK" button on the page to exit and return to the previous page.
After sending, press the "down" key to resend.


The M-series TX sending interface is shown below: The T-series TX sending interface is shown below:



</td></tr>
<tr><td>5</td><td>Receive test</td><td>After entering Rx Mode, it will automatically begin waiting to receive wireless data according to the user-defined parameters.
Press the "OK" button on the page to exit and return to the previous page.</td></tr>
</table>

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

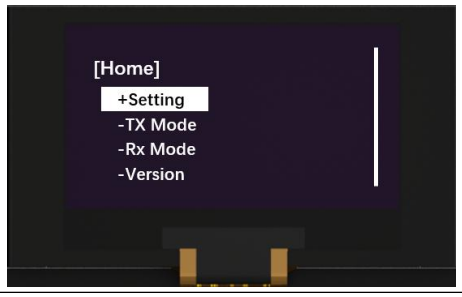
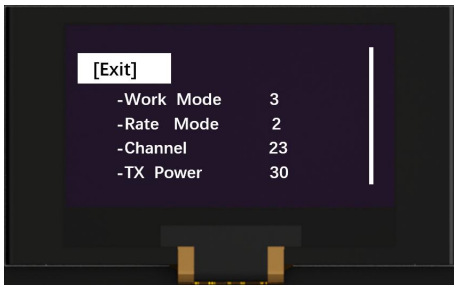
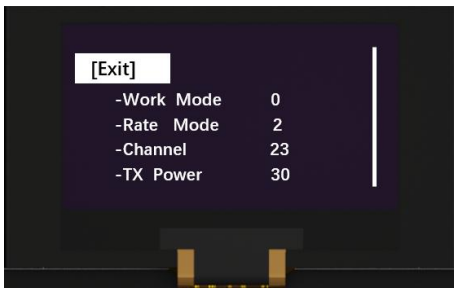
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

		After sending, press the "down" key to restart receiving.  The M-series RX receiver interface is shown below: The T-series RX receiver interface is shown below:  
6	Version information	Displays basic information such as module model; if the M series module has no internal firmware, it displays NONE.  The M-series version information interface is shown below: The T-series version information interface is shown below:  
7	Reset	Select Reset, click OK to confirm, reset the configuration and return to the homepage.  

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

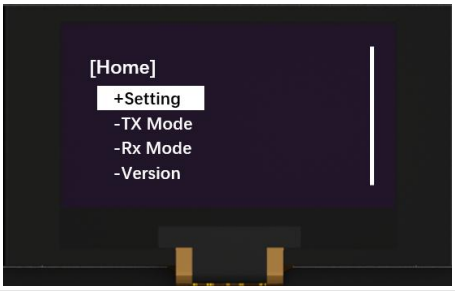
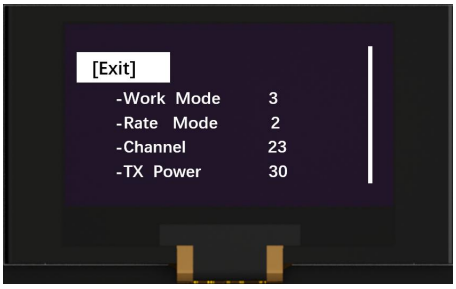
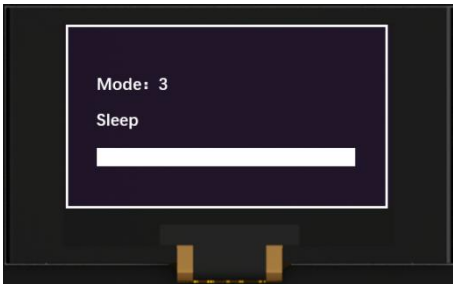
3.2 Implement pass-through function via USB serial port

	matter	illustrate
1	front page	Upon power-on, the system will default to the home page, and all configuration parameters will be restored to their default settings. 
2	menu	Press any key to enter the menu page, then press the "DOWN" key to select "Setting", and then press the "OK" key to enter the settings mode. 
3	Mode settings	In the settings menu, press the "DOWN" key to select "Work Mode," then press the "OK" key to enter the mode settings. 
4	Pass-through mode	Set the mode to transparent mode, i.e., "Mode: 0 Transparent", and press "OK" to save and return. (For first-time use, please switch modes once using the up and down buttons before selecting "Mode: 0").  
5	Implement pass-through function via USB serial port	You can enable transparent transmission with modules of the same model by opening the serial port tool. Note: The configuration parameters of the kit are at the default parameters at this time.

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3 Implementing host computer configuration function via USB serial port

	matter	illustrate
1	front page	Upon power-on, the system will default to the home page, and all configuration parameters will be restored to their default settings. 
2	menu	Press any key to enter the menu, use the "DOWN" key to select "Setting", and then press the "OK" key to enter the settings mode. 
3	Mode settings	In the menu, press the "DOWN" key to select "Work Mode," then press the "OK" key to enter the mode settings. 
4	Set to hibernation mode	Set the mode to hibernation mode, i.e., "Mode: 3 Sleep", and press the "OK" button to save and exit. 
5	Implement host computer configuration function via USB serial port	by opening the corresponding official website's host computer.

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Frequently Asked Questions

4.1 Transmission distance is not ideal

- When there are obstacles in line-of-sight communication, the communication distance will be reduced accordingly ;
- Temperature, humidity, and co-channel interference can all lead to increased packet loss rates in communications .
- The ground absorbs and reflects radio waves, and the test results are poor when the ground is close to the ground .
- Seawater has a strong ability to absorb radio waves, so testing results are poor at the seaside .
- If there are metal objects near the antenna, or if it is placed inside a metal casing, the signal attenuation will be very severe .
- Power register settings are incorrect; air speed is set too high (the higher the air speed, the shorter the distance) .
- At room temperature, the power supply voltage is lower than the recommended value; the lower the voltage, the lower the power output .
- The antenna may be poorly matched with the module or have quality issues.

4.2 Module is easily damaged

- Please check the power supply and ensure it is within the recommended voltage range. Exceeding the maximum value will cause permanent damage to the module .
- Please check the power supply stability; the voltage should not fluctuate significantly or frequently .
- Please ensure anti-static operation during installation and use, as high-frequency devices are sensitive to electrostatic discharge .
- Please ensure that the humidity is not too high during installation and use, as some components are humidity-sensitive .
- Unless there are special requirements, it is not recommended to use it at excessively high or low temperatures.

4.3 The error rate is too high.

- If there is interference from a co-channel signal nearby, move away from the source of interference or change the frequency or channel to avoid the interference.
- An inadequate power supply can also cause garbled characters, so it is essential to ensure the reliability of the power supply.
- Poor quality or excessive length of extension lines or feeders can also lead to a high bit error rate.

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Version	Revision Date	Revision Notes	maintainer
1.0	2025-7-10	Initial version	Hao
1.1	2025-12-8	New Models	Hao

About Us

Technical support: support@cdebyte.com

Documents and RF Setting download link: https://www.cdebyte.com

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

---

Web: https://www.cdebyte.com

Address: B5 Mould Industrial Park, 199# Xiqu Ave, High tech Zone, Chengdu, Sichuan, China

Chengdu Ebyte Electronic Technology Co.,Ltd.

Copyright©2012–2025 , Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000