EWM181-Z20 Series Product Specifications

2.4GHz 20dBm ZigBee3.0 wireless module



Chengdu Ebyte Electronic Technology Co.,Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Contents

Disclaimer . . . 3
1 Product Overview . . . 4
1.1 Product Introduction . . . 4
1.2 Features . . . 4
1.3 Introduction to ZigBee . . . 5
1.4 Application Scenarios . . . 6
2 Specifications . . . 7
2.1 Limit parameters . . . 7
2.2 Working parameters . . . 7
3 Mechanical Dimensions and Pin Definition . . . 8
3.1 Dimensions and pin definitions . . . 8
3.2 Recommended wiring diagram . . . 9
4 Working Mode . . . 10
5 Communication Methods . . . 12
6 Function Introduction . . . 12
6.1 Special Pins . . . 12
6.1.1 M0 and M1 configuration node types . . . 12
6.1.2 Wake - up pin . . . 12
6.1.3 Serial port wakeup . . . 13
6.1.4 One-click networking . . . 13
6.1.5 Network Status Pin . . . 13
6.2 Dual Serial Port Mode . . . 14
6.2.1 Command configuration of serial port 2 . . . 14
6.2.2 Data communication of serial port 2 . . . 14
6.2.3 Multicast of Serial Port 2 . . . 14
7 Quick Start . . . 14
7.1 Establishing a network . . . 15
7.2 Communication Test . . . 17
7.2.1 Coordinator transmits data to network terminals (on-demand communication) . . . 17
7.2.2 Coordinator transmits data to network terminals (multicast communication) . . . 20
8 User Instruction Set . . . 22
8.1 Command Format . . . 22
8.2 AT Commands . . . 22
8.1.1 Local MAC address: . . . 23
8.1.2 Network Status . . . 23
8.1.3 Networking . . . 23
8.1.4 Network Roles . . . 24
8.1.5 Network Channels . . . 24
8.1.6 PANID (Network ID) . . . 24
8.1.7 Network Short Address . . . 25
8.1.8 Network Key . . . 25
8.1.9 Group (multicast) control . . . 25
8.1.10 Extended Network ID (EPANID) . . . 26
8.1.11 Reset . . . 26
8.1.12 System Printing . . . 27
8.1.13 Heartbeat Packet Cycle . . . 27
8.1.14 Transmit power . . . 27
8.1.15 Firmware version . . . 27
8.1.16 Return short address based on MAC address . . . 28
8.1.17 Exit the network . . . 28
8.1.18 Factory Reset . . . 28
8.1.19 Coordinator closes the network configuration . . . 29
8.1.20 Exit command mode (exit HEX/AT mode to transmission mode) . . . 29
8.1.21 Serial port mode configuration . . . 29
8.1.22 Target Address . . . 30
8.1.23 Destination Port . . . 30
8.1.24 Transmission Mode . . . 30
8.1.25 Sleep Mode . . . 31

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.26 Custom Number . . . 31
8.1.27 Network access node table . . . 32
8.1.2 8 Enumeration Nodes . . . 32
8.1.29 Deleting a Node . . . 32
8.2 HEX Commands——Local Configuration . . . 33
8.2.1 Local MAC address: . . . 33
8.2.2 Network Status . . . 33
8.2.3 Networking . . . 34
8.2.4 Network roles . . . 34
8.2.5 Network Channel . . . 34
8.2.6 PANID (Network ID) . . . 35
8.2.7 Network Address . . . 35
8.2.8 Network Key . . . 35
8.2.9 Group (multicast) control . . . 36
8.2.10 Extended PANID . . . 36
8.2.11 Reset . . . 37
8.2.12 System Printing . . . 37
8.2.13 Heartbeat Packet Cycle . . . 37
8.2.14 Transmit power . . . 37
8.2.15 Firmware version . . . 38
8.2.16 Return short address based on MAC address . . . 38
8.2.17 Exit the network . . . 38
8.2.18 Factory Reset . . . 39
8.2.19 Coordinator closes the network configuration . . . 39
8.2.20 Exit command mode (exit HEX/AT mode to transmission mode) . . . 39
8.2.21 Serial port mode configuration . . . 39
8.2.22 Target Address . . . 40
8.2.23 Destination Port . . . 40
8.2.24 Transmission Mode . . . 41
8.2.25 Sleep Mode . . . 41
8.2.26 Custom Number . . . 42
8.2.27 Network access node table . . . 42
8.2.28 Enumerating nodes . . . 42
8.2.29 Deleting a Node . . . 42
8.3 Asynchronous commands and system printing information . . . 43
8.3.1 Module startup . . . 43
8.3.2 Network connection status . . . 43
8.3.3 Monitoring equipment access to the network . . . 44
8.3.4 Monitoring equipment off-grid . . . 45
8.3.5 Device Enumeration Notification . . . 45
8.4 Remote Control Commands . . . 46
8.4.1 HEX command to send data . . . 46
8.4.2 HEX command receiving data . . . 47
8.4.3 HEX command receiving response command . . . 48
8.4.4 Remote query configuration parameters . . . 48
8.4.5 Receive remote query configuration parameters . . . 49
8.4.6 Receiving Heartbeat Packets . . . 50
8.4.7 Remotely modify configuration parameters . . . 51
8.4.8 Remote Configuration Parameter Response . . . 52
9 User Notice . . . 54
11 Frequently Asked Questions . . . 57
11.1 The transmission distance is not ideal . . . 57
11.2 Module is easily damaged . . . 57
11.3 The bit error rate is too high . . . 57
12 Welding Operation Instructions . . . 58
12.1 Reflow temperature . . . 58
12.2 Reflow Oven Profile . . . 58
13 Antenna Guide . . . 59
14 Product Packaging . . . 59

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History 60
About Us 60

Disclaimer

The information in this document, including URL references, is subject to change without notice. The document is provided "as is" without warranty of any kind, including any warranty of merchantability, fitness for a particular purpose, or non-infringement, and any warranty otherwise provided by any proposal, specification, or sample. No liability whatsoever is implied with respect to this document, including liability for infringement of any patent arising from the use of the information in this document. This document is not hereby disclaimed as a prohibition of reproduction, No license, express or implied, to any intellectual property rights is granted by word of mouth or otherwise.

The test data obtained in this article are all obtained by Ebyte Laboratory testing, and the actual results may be slightly different.

All trade names, trademarks and registered trademarks mentioned herein are the property of their respective owners and are hereby acknowledged.

The final right of interpretation belongs to Chengdu Ebyte Electronic Technology Co., Ltd.

Notice :

Due to product version upgrades or other reasons, the contents of this manual may be changed. Ebyte Electronic Technology Co., Ltd. reserves the right to modify the contents of this manual without any notice or reminder. This manual is only used as a guide. Chengdu Ebyte Electronic Technology Co., Ltd. tries its best to provide accurate information in this manual, but Chengdu Ebyte Electronic Technology Co., Ltd. does not ensure that the contents of the manual are completely error-free, and all statements, information and suggestions in this manual do not constitute any express or implied warranty.


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Product Overview

1.1 Product Introduction

The EWM181-Z20 series is a small-volume 2.4GHz frequency band ZigBee3.0 to serial port wireless module designed and produced by Ebyte. It is a SMD type with a maximum transmission power of 20dBm and a pin spacing of 1.27mm. It comes with self-organizing network firmware and is simple and easy to use. It is mainly suitable for data transmission application scenarios.

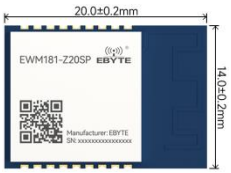

EWM181-Z20SP



EWM181-Z12SX

1.2 Features

- Automatic networking: The coordinator automatically avoids interference when establishing the network, and the nodes joining the network automatically search for the optimal routing path.
- Network self-healing:When a routing node fails, other routing nodes generate new routing paths to maintain the current network transmission; when the coordinator temporarily fails, routers and terminal nodes jointly maintain the current network's continuity; nodes permanently store the networking information.
- Ultra-low power consumption: When the device is in terminal state, it can be set to low power consumption mode. The device sleep time can be changed according to the user's usage time. The standby power consumption in low power consumption mode is less than 4uA. During the parent node data storage time, the device can receive the messages it should receive within the user-set time.
- Automatic retransmission: In unicast (on-demand) mode, the device automatically retransmits when it fails to send a message to the next node. Each message can be retransmitted three times, once every 6 seconds.
- Automatic routing: The module supports network routing function; the router and coordinator carry the network data routing function, and users can perform multi-hop networking.
- Encryption protocol: The module adopts AES 128-bit encryption function, which can encrypt the network and prevent monitoring;
- Serial port configuration: The module has built-in serial port commands, and users can configure (view) the parameters and functions of the module through issuing serial port commands.
- Multi-type data communication: supports network-wide broadcast, multicast and on-demand (unicast) functions; also supports several transmission methods in broadcast and unicast modes.
- Multiple working mode selection: Supports three working modes: transparent transmission mode, semi-

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

transparent transmission mode and protocol mode, and users can switch freely.

- Channel change: supports 16 channel changes from 11 to 26 (2405 to 2480MHZ), and different channels correspond to different frequency bands.
- Network PAN_ID change: Any switch of network PAN_ID, users can customize PAN_ID to join the corresponding network or PAN_ID will be automatically selected to join the network.
- Serial port baud rate change: Users can set the baud rate, up to 230400, the default number of bits is 8, stop bit is 1, no check bit.
- Short address search: Users can find the corresponding short address based on the MAC address (unique and fixed) of the module that has joined the network.
- Instruction format switching: This module supports two instruction modes: AT instruction and HEX instruction, which can be easily configured and switched by the user.
- Module reset: Users can reset the module through serial port commands.
- Restore factory settings: Users can restore the module to factory settings through serial port commands.
- Network node management: The coordinator can record the nodes connected to the network, enumerate the information of the connected nodes, delete unnecessary nodes, and facilitate the automated management of networked devices.
- The coordinator device, router, and terminal node are integrated into one design , and can switch between modes through instructions .
- Dual serial ports: Both serial ports support data transmission, AT commands, HEX commands, and the two serial ports can be used independently without interfering with each other.

1.3 Introduction to ZigBee

ZigBee technology is a short-range, low-complexity, low-power, low-rate, low-cost two-way wireless communication technology. There are three types of logical devices in a ZigBee network: Coordinator, Router, and End-Device. A ZigBee network consists of a Coordinator, multiple Routers, and multiple End_Devices, supporting star, tree, mesh, or hybrid MESH network topologies.

The functions of each type of equipment are as follows:

Coordinator

The coordinator is responsible for starting the entire network and is also the first device in the network. The coordinator selects a channel and a network ID (also called a PAN ID, i.e. Personal Area Network ID), and then starts (establishes) the entire network. The coordinator can also be used to assist in establishing the bindings of the security layer and the application layer in the network.

Note that the role of the coordinator is mainly related to the startup and configuration of the network. Once these are completed, the coordinator works like a router (or disappears). Due to the distributed nature of the ZigBee network itself, the operation of the entire network is no longer dependent on the presence of the

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

coordinator. If a new device needs to join the network, the coordinator is still needed to record and allocate resources, otherwise the new device cannot join the network.

Router

The functions of a router are mainly to allow other devices to join the network, multi-hop routing and assist the communication of its own sub-terminal dormant devices.

Normally, a router is expected to be always active, so it must be powered by the mains, but when using a network mode such as Tree Group, the router is allowed to operate once in a certain period, so that it can be powered by batteries.

End-Device

The end device has no specific responsibility for maintaining the network structure, it can sleep and wake up, so it can be a battery-powered device.

1.4 Application Scenarios

- Smart home and industrial sensors, etc.
- Security system, positioning system;
- Wireless remote control, drone;
- Healthcare products;
- Wireless voice, wireless headset;
- Automotive industry applications.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Specifications

2.1 Limit parameters

Main parameters	performance		Remark
	Minimum	Maximum	
Supply voltage (V)	0	3. 8	Over 3.8V will permanently burn the module
Blocking power (dBm)	-	10	The probability of burning is lower when used at close range
Operating temperature (°C)	-40	+85	Industrial Grade

2.2 Working parameters

Main parameters		performance			Remark
		Minimum	Typical Value	Maximum	
Operating voltage (V)		2.0	3.3	3. 8	≥3.3V can guarantee output power
Communication level (V)		-	3.3	-	Using 5V TTL may burn out
Operating temperature (°C)		-40	-	+85	Industrial-grade design
Operating frequency band (GHz)		2.400	-	2.480	Support ISM band
Power consumption	Emission current (mA)	-	200	-	@Instantaneous power consumption of 20 dBm
	Receive current (mA)	-	11	-	-
	Sleep current (μA)	-	4	-	Long-term dormancy
Maximum transmit power (dBm)		- 5	20	20	-

Main parameters		Describe	Remark
EWM181-Z20SP communication distance		800m	Clear and open space, onboard PCB antenna, height 2 meters, air rate 250kbps
EWM181-Z20SX communication distance		1.3Km	Clear and open air, antenna gain 5.0dBi , height 2 meters, air rate 250kbps
protocol		ZigBee	-
Communication interface		UART	TTL level
Packaging		SMD	-
Packet length	Transparent transmission	150 Bytes	-
	Fixed-point broadcast/multicast	75 Bytes	-
	Fixed-point unicast	128 Bytes	-

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Interface	1.27mm	Stamp Holes
Dimensions	14 *20mm	±0.2mm
EWM181-Z20SP Antenna Interface	PCB	Equivalent impedance is about 50Ω
EWM181-Z20SX Antenna Interface	IPEX	
EWM181-Z20SP Product Weight	1.0g	±0.1g
EWM181-Z20SX Product Weight	1.3g	


3 Mechanical Dimensions and Pin Definition

3.1 Dimensions and pin definitions

EWM181-Z20SP:

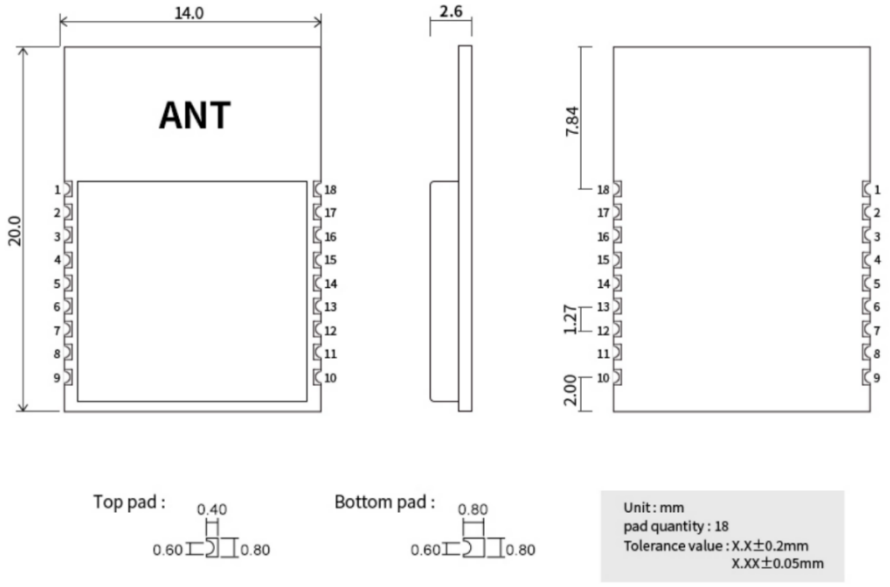

EWM181-Z20SX:

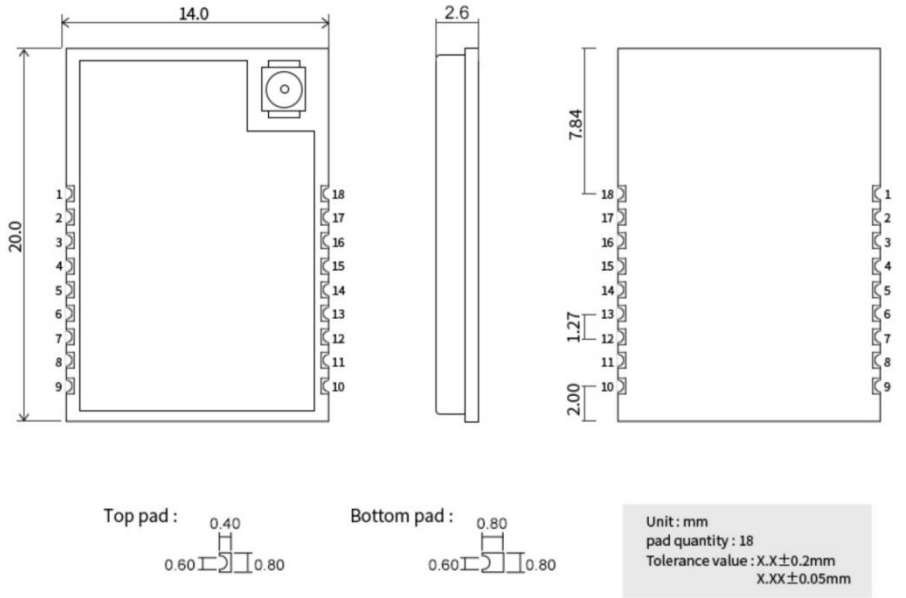


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Pin number	Pin Name	Pin Direction	Pin Purpose
1	GND	Input/Output	Ground wire, connected to the power reference ground
2	WKP	Input	Module sleep wake-up pin, low level wake-up, default pull-up,Please refer to 6.1.2 Wake-up Pin for details.
3	NWK_KEY	Input	One-key networking pin, 10ms~1000ms low level network configuration, 5s low level network reset, default pull-up,Please refer to 6.1.4 "One-click Networking" for details.
4	PA1	Input/Output	Reserved, users do not need to pay attention
5	PA2	Input/Output	Reserved, users do not need to pay attention
6	PC3	Input/Output	Reserved, users do not need to pay attention
7	PC2	Input/Output	Reserved, users do not need to pay attention
8	PC1	Output	TXD, serial port 2 data output
9	PC0	Input	RXD, serial port 2 data input
10	GND	Input/Output	Ground wire, connected to the power reference ground
11	VCC	Input	Power supply, 2.0~3.8 V DC power supply
12	TXD	Output	Serial port 1 data output
13	RXD	Input	Serial port 1 data input
14	M1	Input/Output	The node type selection port 1 should be used in conjunction with port M0
15	M0	Input/Output	The node type selection port 0 should be used in conjunction with port M1
16	LINK	Output	Network status indicator pin, high level indicates network validity, default is low level. Refer to 6.1.5 Network Status Pin for details.
17	PB1	Input/Output	Reserved, users do not need to pay attention
18	RST	Input	Reset pin

3.2 Recommended wiring diagram

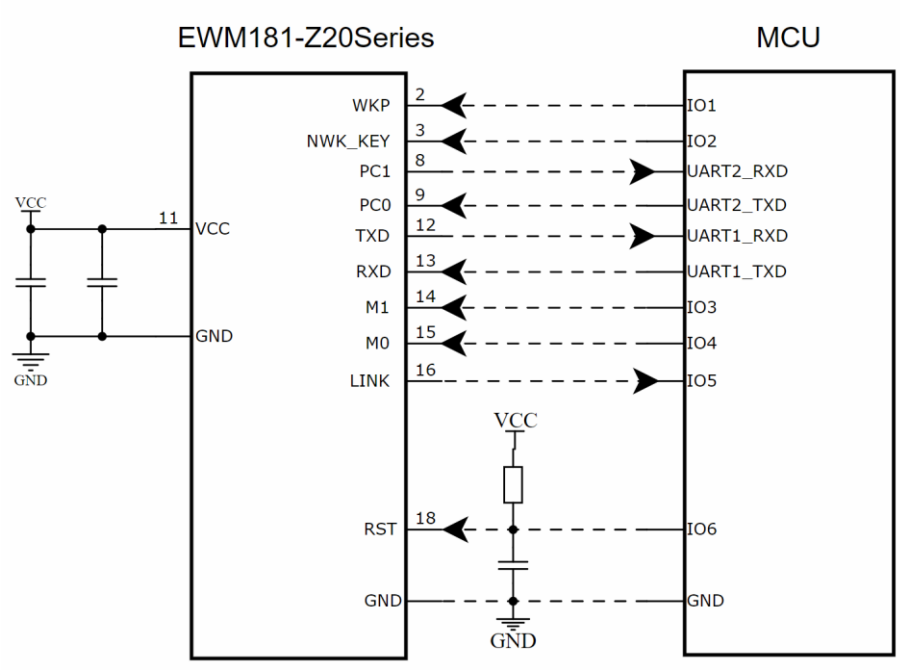

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Working Mode

<table>
<tr><th colspan="2">Working Mode</th><th>illustrate</th></tr>
<tr><td rowspan="2">Transmission Mode</td><td>Transparent mode</td><td>Data sending:
UART directly inputs the message to be transmitted, and the module directly sends the data. If the module is not networked, it cannot send data. To whom the data is sent is determined by the configuration parameters "destination address" and "destination port" in the module, which can be configured as unicast, multicast, and broadcast.
After turning on "Print network prompt information", the sent data will return "OK\r\n", "FAIL\r\n", "ERROR\r\n" to indicate the sending result.

Data reception:
After the networking module receives the data message, it directly prints out all the data messages via UART.

Mode switch:
Enter "+AT" to enter AT command mode
Enter "+++" to enter HEX command mode</td></tr>
<tr><td>Semi-transparent mode</td><td>Data sending:
UART input is in the format of "send to whom + data message", where "send to whom" consists of three bytes, the first two bytes are "destination address" (little endian format), and the third byte is "destination port". These two parameters are used in the same way as the "destination address" and "destination port" in the configuration parameters, but will not change the settings of these two configuration parameters.

Data reception:
After the networked module receives the data message, UART prints the format of "who sent the data + data message". The "who sent the data" consists of three bytes, including two bytes of "source address" (little endian format) and one byte of "source port".

Mode switch:
Enter "+AT" to enter AT command mode.
Enter "+++" to enter HEX command mode.</td></tr>
<tr><td colspan="2">AT command mode</td><td>Mode Description:
In this mode, AT commands are used to configure and query the module. Each AT command has its own corresponding HEX command. In AT command mode.
There are three functions of AT commands: execution, query and configuration.

Execution:
The input command format is "AT+command name" without any symbols or parameters at the end, such as "AT+JOIN". System LOG information such as "OK\r\n" and "FAIL\r\n" is returned.

Query type:
Enter the command "AT+command name?" followed by "?", for example, "AT+NWK?". The current value of the configuration parameter corresponding to the command is returned in the format of "command name=parameter value" followed by a carriage return and line feed symbol, for example, "NWK=1\r\n".

Profiles:</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Enter the command in the format of "AT+command name=command parameter", for example "AT+NWK=1". The return command format is "command name=parameter value" to indicate whether the parameter setting is valid. If the returned parameter is not equal to the set parameter, it means that the setting is invalid. **Mode switch:** Enter "AT+EXIT" to exit the transmission mode or do not enter any AT command and wait for 1 minute to exit the transmission mode. When exiting the AT command mode, UART prints out the prompt message "EXIT_AT\r\n".
HEX Command Mode	**Mode Description:** HEX commands are divided into two categories according to their functions: local commands and remote commands. Each local command has its own corresponding AT command. **Command format:** The three formats of input command, return command and asynchronous reception start with FE, FB and FC respectively. The second byte of the command is the command frame length, the third byte of the command is the command category, the fourth byte of the command is the command code, the fifth byte is the command parameter, and the last byte of the command is the AA end symbol. The command length includes the third byte to the last byte AA. Each input command must trigger a corresponding return command. If there is no return command, it means the module may be abnormal. **Local commands:** The local commands of HEX commands have corresponding AT commands. When the parameters of HEX commands are empty, the execution or query effect of the same AT commands is triggered. **Remote commands:** Remote commands need to wait for Zigbee wireless transmission, and the delay time of the return command is slightly longer than that of the local configuration command. The parameters of the remote command include the target address and the target port, which can be arranged and combined into unicast, multicast, and broadcast, just like the destination address and the target port in the transparent transmission mode. Remote commands can be used for data transmission, remote configuration, and remote query. Remote configuration and remote query will trigger asynchronous receive commands. If it is multicast or broadcast, multiple asynchronous receive commands may be triggered. **Asynchronous reception:** Asynchronous receiving commands include the following messages: receiving data sent by other modules in HEX command mode; receiving return messages of remote configuration and remote query and heartbeat packets of other modules; receiving system notification messages such as network disconnection, etc.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Communication Methods

Serial number	Communication	describe
1	broadcast	After joining the network, users can broadcast to the entire network according to instructions (divided into three broadcast modes) 1. Broadcast mode 1 - the message is broadcast to all devices in the entire network; 2. Broadcast mode 2 - the message is broadcast only to devices that have turned on reception (except sleep mode); 3. Broadcast mode 3 - The message is broadcast to all full-function devices (routers and coordinators) The target short address is 0xFFFC (broadcast mode 3), 0xFFFD (broadcast mode 2), 0xFFFF (broadcast mode 1), and the target port is 0x01 or 0xFF
2	Multicast	When joining the network, users can multicast to all non-sleeping devices in the network. Non-sleeping devices that receive multicast need to join a group. A device can join multiple groups at the same time and can also exit a specified group freely. The target short address is the group ID, and the target port is 0x00
3	On Demand	When joining a network, users can communicate with devices in the network individually using short addresses according to instructions. The target short address is the other party's short address, and the target port is 0x01

6 Function Introduction

6.1 Special Pins

6.1.1 M0 and M1 configuration node types

The module's M0 and M1 pins are internally pulled up by default, i.e., M0=1, M1=1. By externally pulling these two pins high (pulling high = floating) or low, the node type can be switched. It can be used together with the node type setting of the AT command or HEX command. The last command configuration or the last IO port setting determines the final node type.

- Coordinator: M0=0, M1=0.
- Router: M0=1, M1=0.
- Non-sleeping terminal: M0=0, M1=1.
- Sleep terminal: M0=1, M1=1.

6.1.2 Wake - up pin

The module's WKP is an external wake-up pin. When the module is configured as a sleep terminal, if you need to input commands or data to the UART, you need to pull this pin low and then input commands or data.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.1.3 Serial port wakeup

If the WKP pin of the module in sleep terminal mode is not pulled low, you can also input a 10us low level or send a single byte 00 5ms to 100ms before inputting commands or data to UART to wake up the module and then input the serial port content.

6.1.4 One-click networking

The module's NWK_KEY pin is a one-key networking pin. A module that is not networked can enter the network configuration mode (coordinator creates a network, routers and terminal nodes search and join the network) by short pressing (10ms~1000ms low level). A coordinator that has established a network can short press this button to allow network access, and short press it again to turn off network access. A short press of this button will have no effect on routers and terminal nodes that have joined the network.

If the module is connected to the network, long press this key (low level for more than 5 seconds), the module will exit the network. If the module is not connected to the network, long press this key, the module will clear the configuration parameters and restore to factory settings.

Due to the powerful performance of the EWM181-Z20 series module, the sleep terminal needs to be in an active state in order to use the NWK_KEY pin.

6.1.5 Network Status Pin

The module's LINK pin indicates the network status. The signal is as follows

- When there is no network, the LINK pin is at a low level;
- When there is a network, the LINK pin is high level;
- When the network is turned on, the LINK pin outputs a 1Hz square wave; when the network activation period ends, the LINK pin returns to a high level;
- When joining the network, the LINK pin outputs a 3Hz square wave; when joining the network successfully, the joining action stops and the LINK pin remains at a high level; if joining the network is unsuccessful (timeout), the LINK pin remains at a low level;
- The dormant terminal has been connected to the network. If the WKP pin is pulled low, the LINK pin outputs a high level. If the WKP pin is not pulled low, the LINK pin outputs a high level pulse (1~2ms) each time the dormant terminal wakes up and receives data. If the dormant terminal receives data packets continuously, the pin outputs pulses continuously.
- When the sleep terminal first connects to the network, when it re-establishes the network connection, and when any type of device (the sleep terminal needs to be awakened) has connected to the network and the LINK pin is pulled low, the LINK pin outputs a 5-second high level.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.2 Dual Serial Port Mode

In addition to pins 12 and 13 of the module, which are TXD and RXD of serial port 1 (main serial port), pins 8 and 9 can be used as TXD and RXD of serial port 2. Serial port 2 and serial port 1 have exactly the same functions, and can realize independent HEX command configuration and communication, AT command configuration, and data transmission. And serial port 2 can work in different command modes and transmission modes from serial port 1.

6.2.1 Command configuration of serial port 2

D and TX D of the PC or MCU , and then the HEX command or AT command is input to achieve the same configuration function as the serial port 1. The serial port 2 is in HEX command mode by default, and the system printing information can be turned on or off separately in the transmission mode.

Serial port 2 has its own independent "Group Control", "Heartbeat Packet Cycle", "Serial Port Configuration Mode", "Destination Address", "Destination Port", "Transmission Mode", and "Custom Number",All other AT commands or HEX commands are the same as those for Serial Port 1.

6.2.2 Data communication of serial port 2

Serial port 2 can communicate with other modules in through-transmit mode, half-transmit mode, and other modes. It can also be remotely controlled using HEX commands. If other modules want to communicate with or control the serial port 2 of this machine, the "destination port" in the transmission mode should be set to 0x02, or the target port in the HEX command should be 0x02.

6.2.3 Multicast of Serial Port 2

Serial port 2 has its own independent grouping table and heartbeat packet, so serial port 1 and serial port 2 on the module can be added to different groups respectively. The serial port 2 of this machine can be added to the same group as the serial port 1 of other modules and receive the same multicast, and the serial port 1 of this machine can also be added to the same group as the serial port 2 of other modules and receive the same multicast.

7 Quick Start

The ZigBee self-organizing network module is easy to use. In order to allow users to quickly become familiar with the module, this section will guide users to achieve configuration and communication in various modes through simple configuration. The working mode is HEX instruction mode.

The user can pull the pin low to set the HEX command. To facilitate the host computer observation, this experiment uses the HEX command format. The AT command user is not tested in this experiment. (The AT command mode cannot be used for host computer configuration.)

In addition, users can use an external microcontroller (MCU) to directly connect to the module UART for serial command communication instead of using the baseboard to achieve secondary development.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.1 Establishing a network

1. Two EWM181-Z20SX, serving as the coordinator and terminal node respectively;
2. Open the host computer software "EWM181_Zigbee_Setting_V1.0", select the port number, set the serial port baud rate (default 115200), and open the serial port;



3. Click to enter configuration, read parameters, and read the corresponding module parameters.

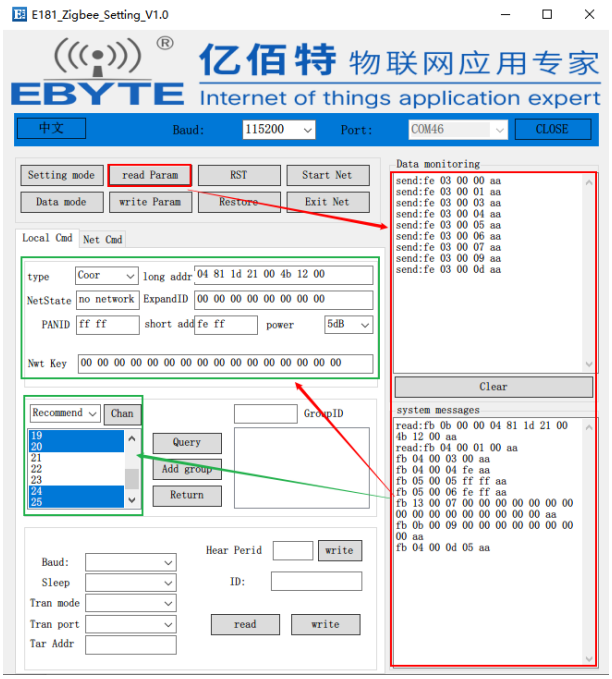


4. Select the node type as coordinator and write the parameters. Then click Restart. The module is successfully read as a coordinator. Read the parameters again and click Configure Network to wait for the coordinator to


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


start building the network. Users can view the module parameters. After the network is built, read the parameters: Configure network parameters: (When PAN I D is F F F F , it is automatic PAN ID)

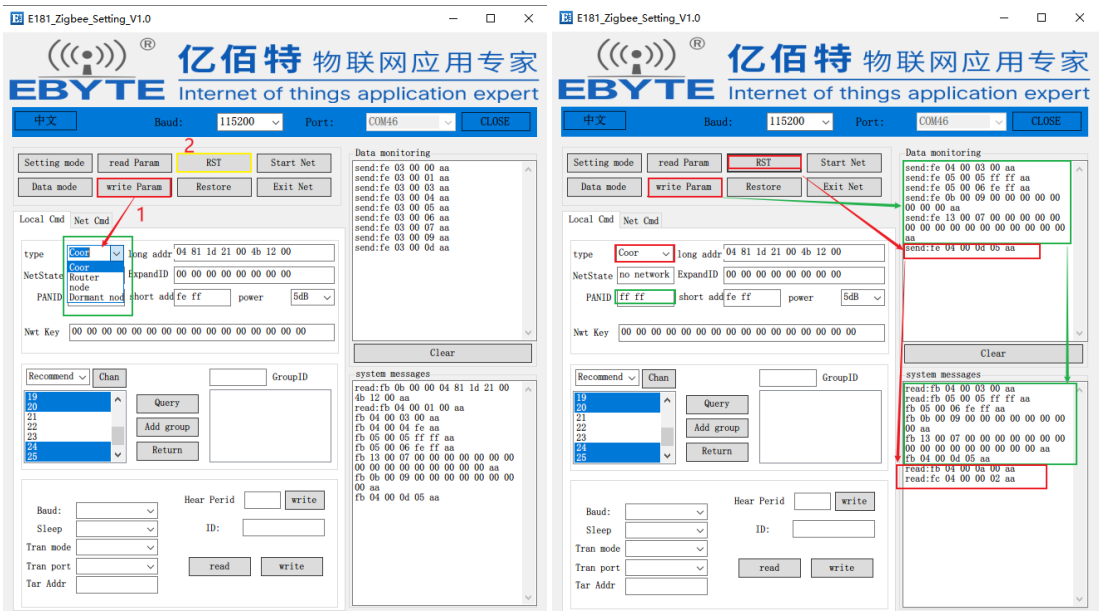

5. Select another module and follow the same steps to set it as a terminal or a dormant terminal (the module is a dormant terminal by factory default and needs to be set. In this experiment, it is a terminal).

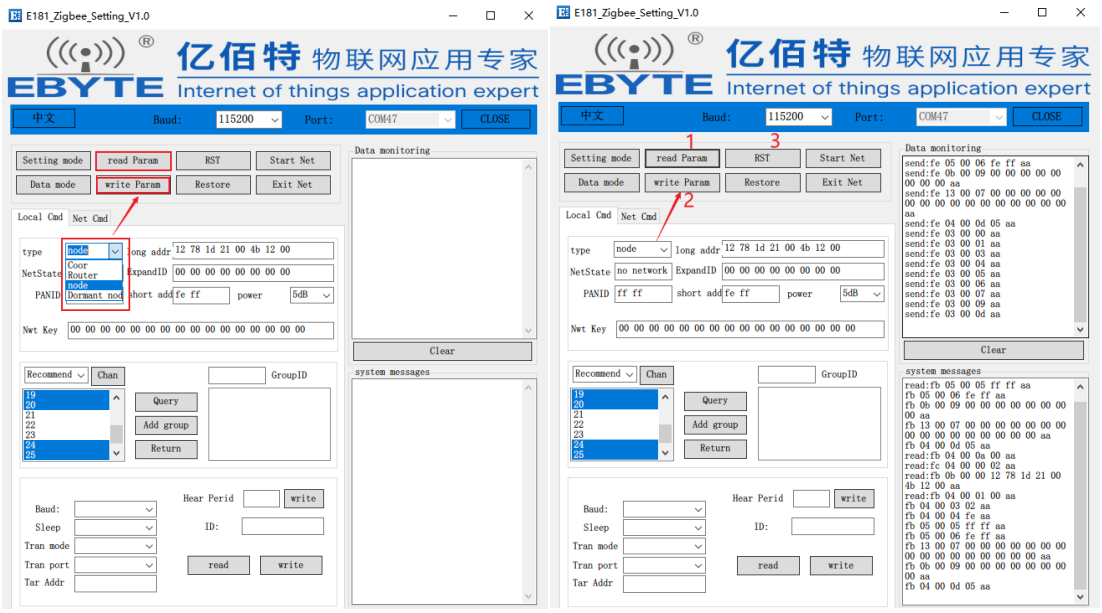

6. After configuring the terminal, click Configure Network, read the parameters PANID\Network Key successfully (consistent with the coordinator), and the network is successfully established.

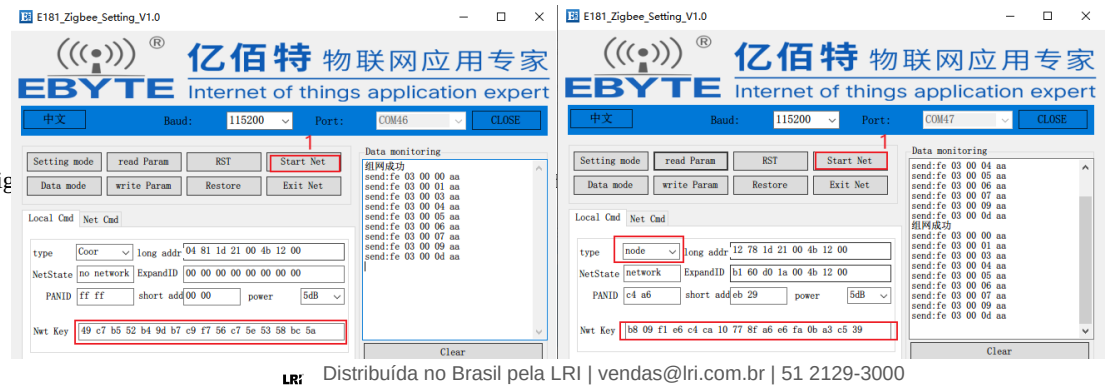


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2 Communication Test


7.2.1 Coordinator transmits data to network terminals (on-demand communication)

Coordinator:

1. Click to read parameters

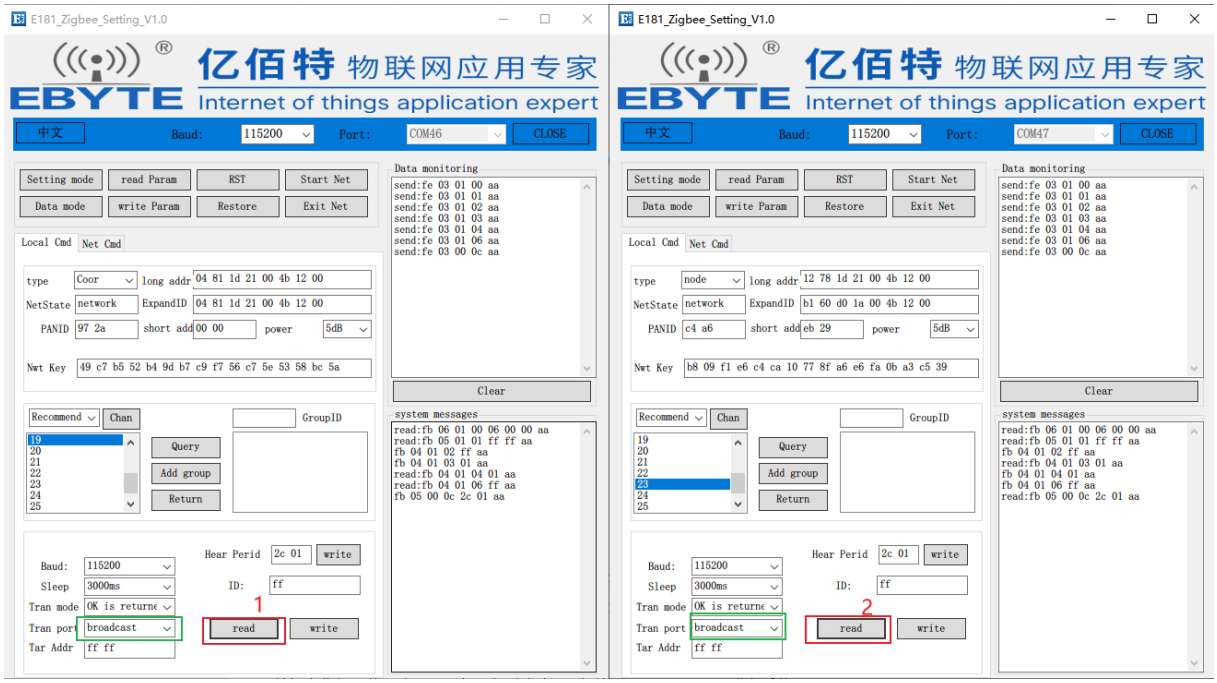


2. Select transparent transmission mode (mode 1)

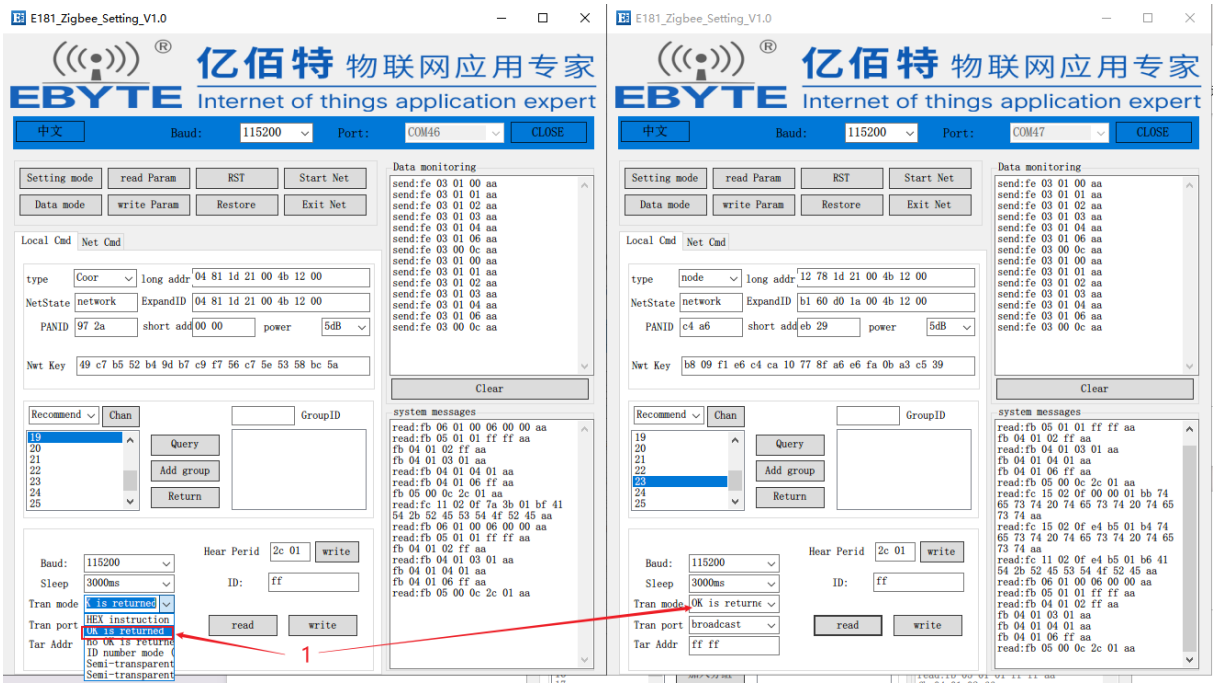


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Select transparent transmission protocol (unicast)

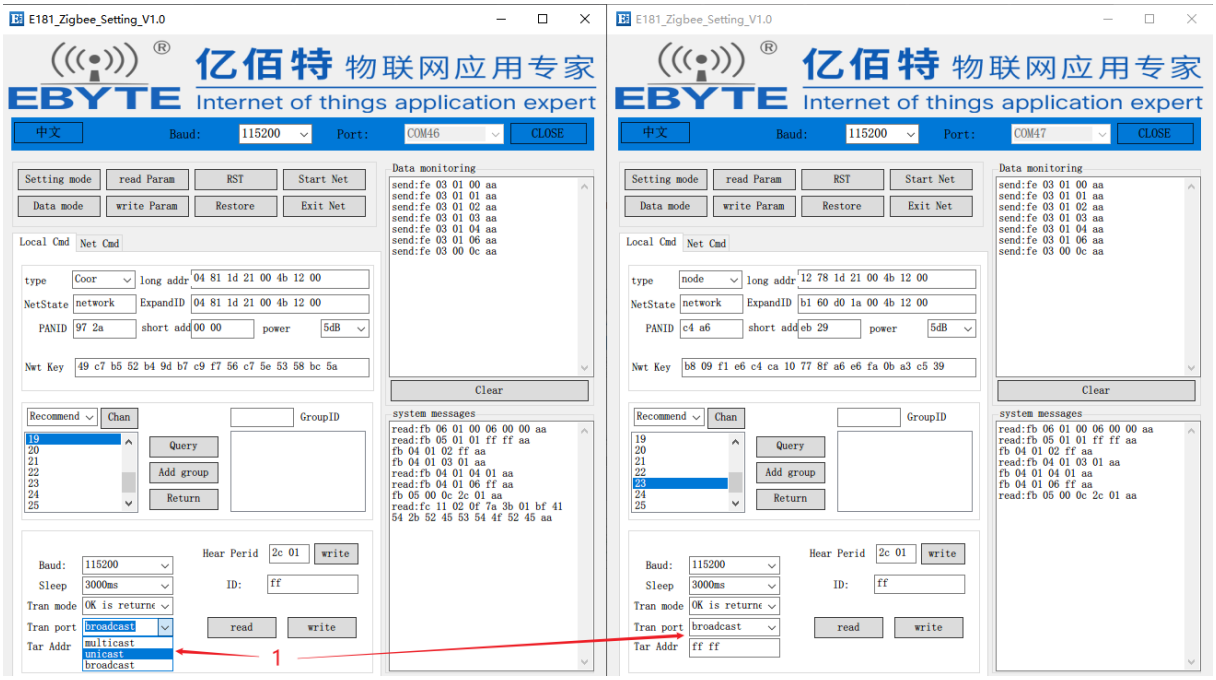


4. Fill in the target address (short address of the network terminal)

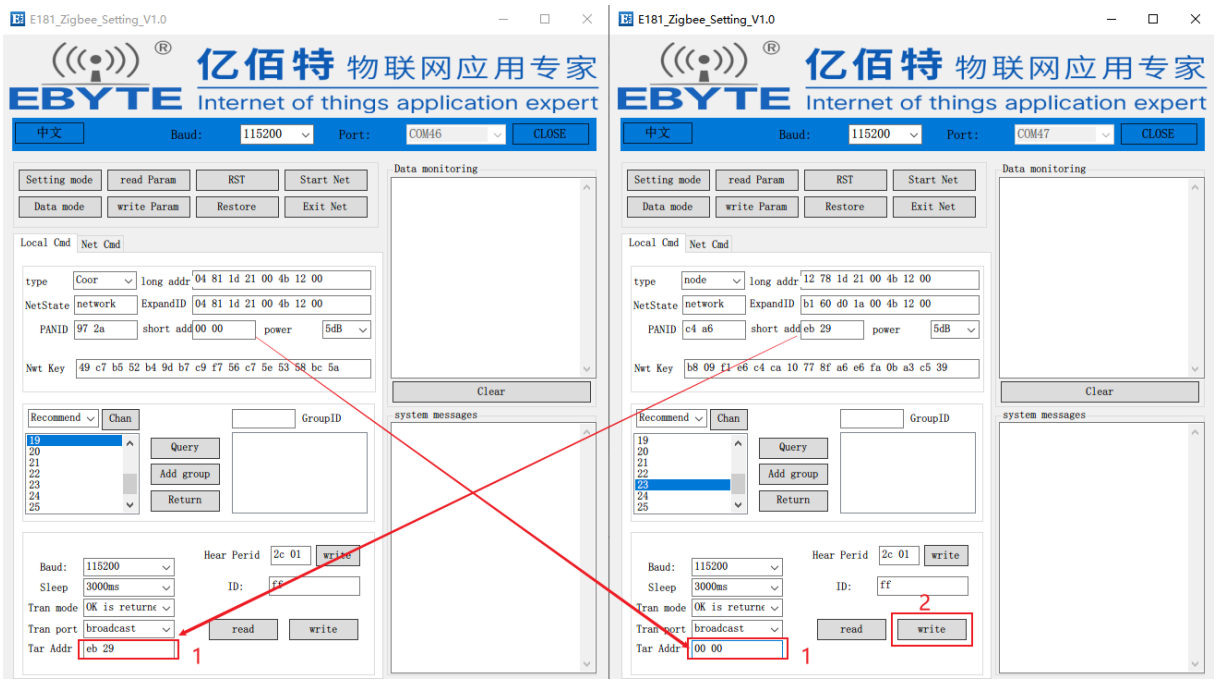


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5. Click Write Parameters

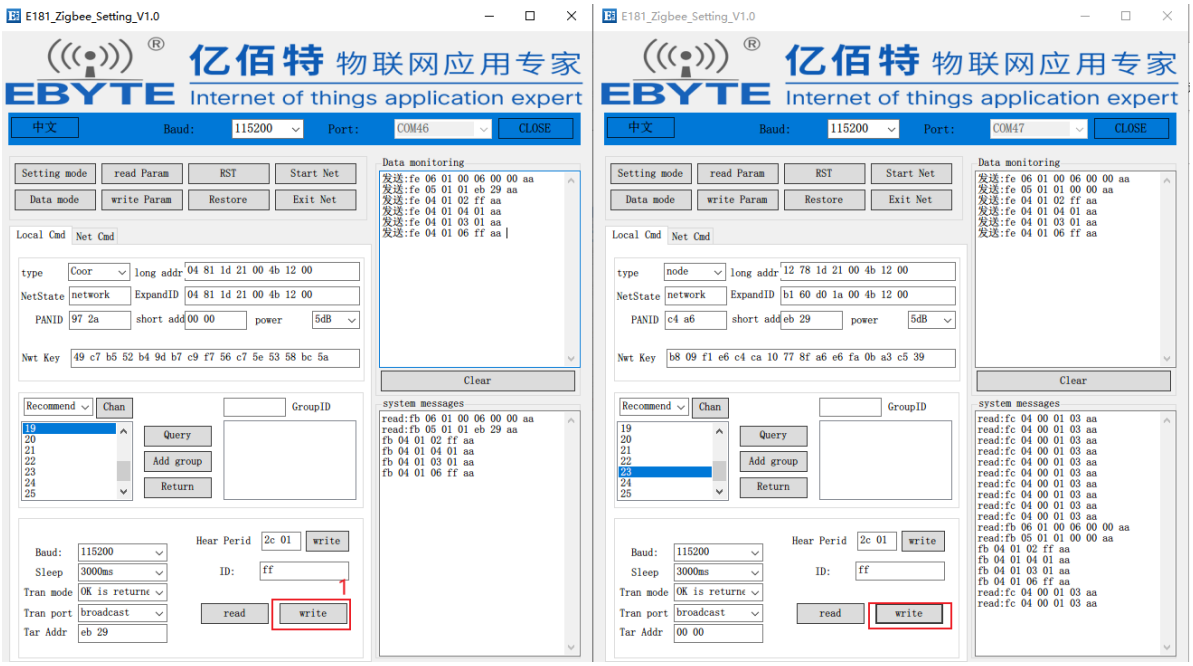

6. Finally, click to enter the transmission mode, shut down the host computer, and use the serial port tool to perform communication test

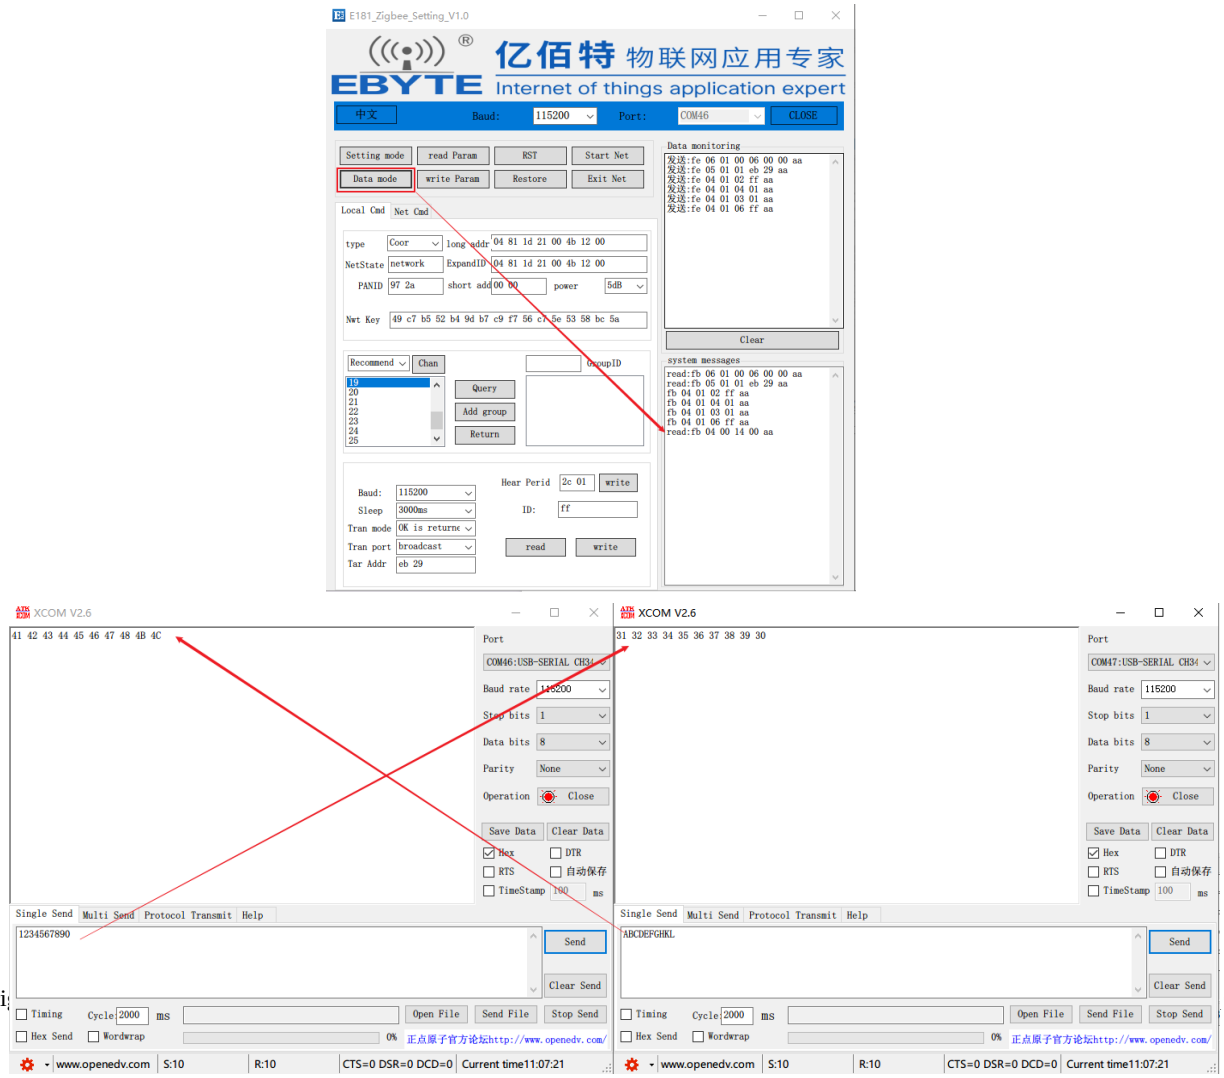

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.2.2 Coordinator transmits data to network terminals (multicast communication)

1. the nodes that need to be multicasted on the basis of unicast . For example, add terminal A and terminal B to group



00 01.


2. The coordinator selects multicast and fills in the group number

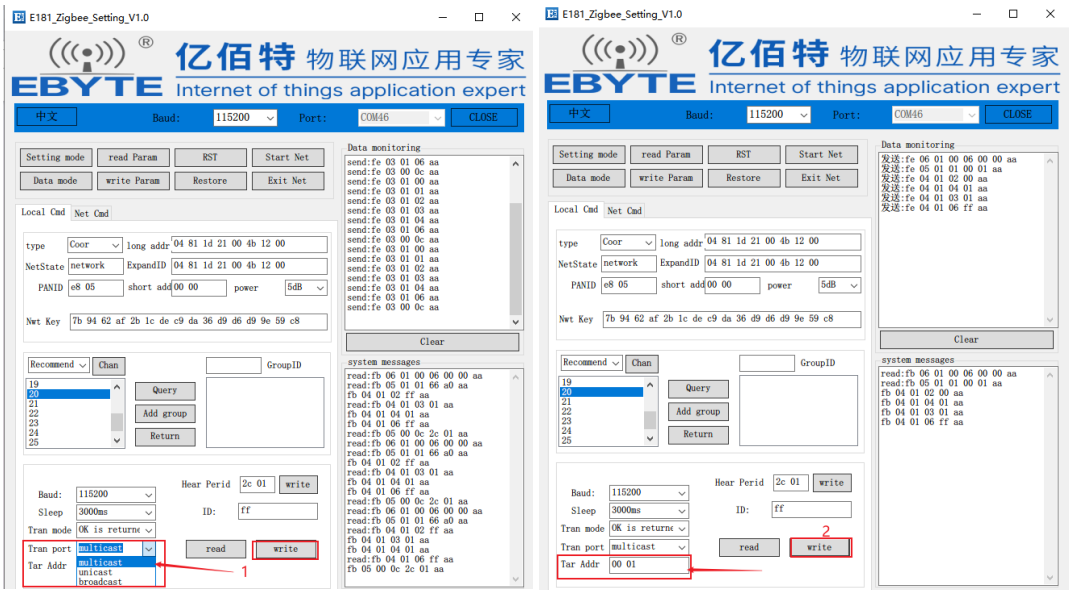

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Click the transmission mode, turn off the host computer, use the serial port tool to open the corresponding serial port, and perform communication test

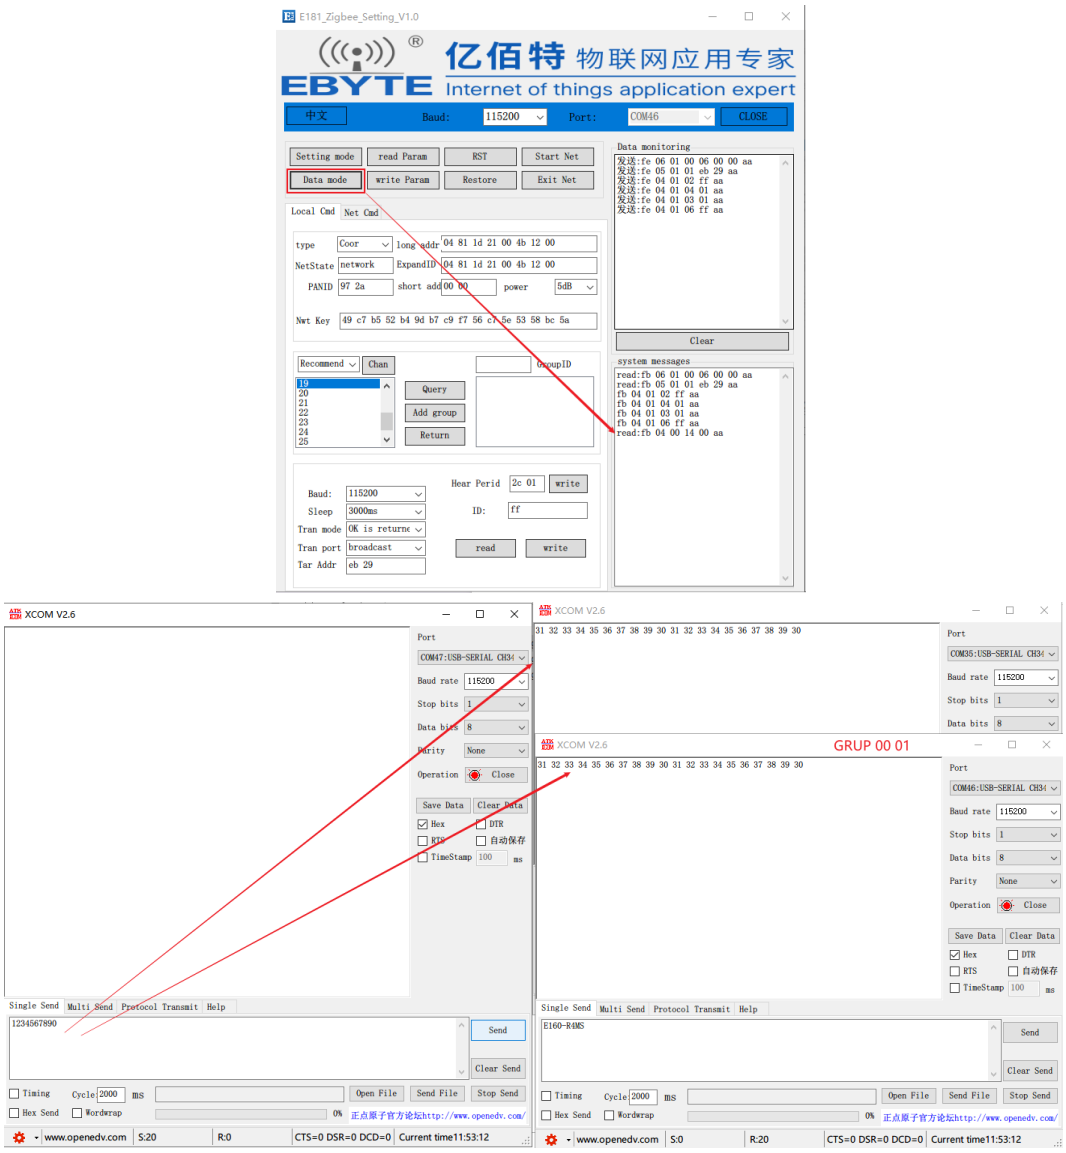

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8 User Instruction Set

For the convenience of users, the EWM181 module uses two instruction formats, namely AT instruction format and HEX instruction format.

The module is in transmission mode by default. Enter +AT to enter AT command mode, and enter +++ to enter HEX command mode. When using AT commands, you cannot use a line break at the end.

8.1 Command Format

The basic format of HEX command is:

HEX commands have three input and output modes:

Input command: 0xFE + frame length (1 byte) + command type (1 byte) + command code (1 byte) + command parameter ((frame length - 3) bytes) + 0xAA

Return command: 0xFB + frame length (1 byte) + command type (1 byte) + command code (1 byte) + command parameters ((frame length - 3) bytes) + 0xAA. For each input command, only one return command is generated.

Receive command: 0xFC + frame length (1 byte) + command type (1 byte) + command code (1 byte) + command parameters ((frame length - 3) bytes) + 0xAA. The receive command includes network status information, receive data, etc.

The basic format of AT commands:

The basic format of AT commands is "AT+command name", where AT commands are divided into three input formats: execution format, query format, and configuration format.

Execution type: "AT+command name", followed by nothing, including characters or symbols, such as "AT+JOIN". Execution type commands return status values such as "OK\r\n" and "ERROR\r\n".

Query type: "AT+command name?", that is, the command name followed by the ASC character '?', for example, "AT+NWK?". Execution type returns the format of "command name=parameter value\r\n", for example, "NWK=1\r\n".

Configuration format: "AT+command name=configuration value", the command name is followed by '=', for example, "AT+CH=25". The execution format returns the "command name=parameter value\r\n" format, for example, "CH=25\r\n". If the returned parameter value is not equal to the configured value, it means that the parameter value is incorrect and the configuration is invalid.

8.2 AT Commands

AT commands are used to configure the module. The input format is "AT+command keyword". The symbol "=" or "?" after the keyword indicates configuration, query and other operations respectively. If there is no symbol after the

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

keyword, it means execution operation.

8.1.1 Local MAC address:

<table>
<tr><td colspan="3">AT command: local MAC</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ MAC ?</td><td>MAC=mac_asc \r\n</td></tr>
<tr><td>parameter</td><td colspan="2">mac_asc: ASCII format of the MAC address, 8 two-digit characters, each two-digit character is separated by ":", for example, 00:12:4B:00:1A:D0:60:E3. The ASCII format MAC address is output in MSB big-endian format.</td></tr>
<tr><td>illustrate</td><td colspan="2">none</td></tr>
<tr><td>Example</td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ MAC ?</td><td>MAC= 00:12:4B:00:1A:D0:60:E3 \r\n</td></tr>
</table>

8.1.2 Network Status

<table>
<tr><td colspan="3">AT command: network status</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ NWK ?</td><td>NWK = nwk _asc \r\n</td></tr>
<tr><td>parameter</td><td colspan="2">nwk_asc: Network status, ASCII code format, range 0~2.
<table>
<tr><td>nwk_asc (ASCII format)</td><td>state</td></tr>
<tr><td>0</td><td>No network</td></tr>
<tr><td>1</td><td>Networked</td></tr>
<tr><td>2</td><td>Network established but offline</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td colspan="2">none</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ NWK ?</td><td>NWK = 1 \r\n</td></tr>
</table>

8.1.3 Networking

<table>
<tr><td colspan="3">AT command: Networking</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>implement</td><td>AT+ JOIN</td><td>status_asc\r\n</td></tr>
<tr><td>parameter</td><td colspan="2">status_asc : Network status, in ASCII code format.
<table>
<tr><td>status_asc (ASCII format)</td><td>state</td></tr>
<tr><td>OK</td><td>Operation is effective</td></tr>
<tr><td>JOINED</td><td>Networked</td></tr>
<tr><td>INVALID</td><td>Invalid operation</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td colspan="2">1. The coordinator executes this command for the first time to create a network, and executes this command thereafter to open the network and accept new devices to join the network.
2. This command is valid for routers, terminal nodes, and dormant terminals that are not connected to the network. This command is invalid for routers that are connected to the network.
3. Returning OK only means that the network has started, not that the network has been successfully established. To determine whether the network is successfully established, please use "Query Network Status" or turn on the "System Print" mode.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>implement</td><td>AT+ JOIN</td><td>OK \r\n</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.4 Network Roles

<table>
<tr><td colspan="3">AT Commands: Network Role</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+DEV?</td><td>DEV=dev_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+DEV=dev_asc</td><td>DEV=dev_asc\r\n</td></tr>
<tr><td>parameter</td><td colspan="2">dev_asc: Network role, ASCII code format.<table><tr><td>dev_asc (ASCII format), uppercase letters are valid</td><td>Network Role</td></tr><tr><td>C</td><td>Coordinator</td></tr><tr><td>R</td><td>router</td></tr><tr><td>E</td><td>Endpoints</td></tr><tr><td>S</td><td>Sleep terminal (default)</td></tr></table></td></tr>
<tr><td>illustrate</td><td colspan="2">1. The coordinator module and the router module cannot switch roles, but the terminal node and the dormant terminal can switch between each other.
2. After modifying the network role, you need to restart the module to take effect.
3. Modifying the role after networking will result in network disconnection and network clearing.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+DEV ?</td><td>DEV= S \r\n</td></tr>
<tr><td>set up</td><td>AT+DEV= R</td><td>DEV= R \r\n</td></tr>
</table>

8.1.5 Network Channels

<table>
<tr><td colspan="3">AT command: network channel</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+CH?</td><td>CH=ch_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+CH=ch_asc</td><td>CH=ch_asc\r\n</td></tr>
<tr><td>implement</td><td></td><td></td></tr>
<tr><td>parameter</td><td colspan="2">ch_asc: channel, in ASCII format, with a maximum value of 255.<table><tr><td>ch_asc (ASCII format)</td><td>Channel</td></tr><tr><td>11~26</td><td>Fixed scanning of a single channel</td></tr><tr><td>254</td><td>Scan channels 11, 14, 15, 19, 20, 24, 25 simultaneously</td></tr><tr><td>255</td><td>Scan channels 11 to 26 simultaneously (default)</td></tr><tr><td>other</td><td>Invalid channel, do not change the current value</td></tr></table></td></tr>
<tr><td>illustrate</td><td colspan="2">1. Set the channel to the scanning channel during networking, not the real channel.
2. The coordinator can establish a network using a fixed channel
3. Routers, terminal nodes, and dormant terminals scan a single channel and join the channel coordinator first. If there is no suitable coordinator for the channel, they may join other channel coordinators.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ CH?</td><td>CH= 255 \r\n</td></tr>
<tr><td>set up</td><td>AT+ CH = 11</td><td>CH= 11 \r\n</td></tr>
</table>

8.1.6 PANID (Network ID)

<table>
<tr><td colspan="3">AT command: PANID</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+PANID?</td><td>PANID=panid_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+PANID=panid_asc</td><td>PANID=panid_asc\r\n</td></tr>
<tr><td>implement</td><td></td><td></td></tr>
<tr><td>parameter</td><td colspan="2">panid_asc: Network ID, in ASCII format, representing 4 hexadecimal digits.<table><tr><td>panid_asc (ASCII format)</td><td>PANID</td></tr><tr><td>0xFFFF</td><td>Random PANID</td></tr></table></td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

		(default)
	other	Fixed PANID
illustrate	1. The coordinator generates a random PANID or a fixed PANID. 2. After setting a fixed PANID, routers, terminal nodes, and dormant terminals can only join the coordinator of the PANID.	
Example		
	enter	return
Query	AT+ PANID?	PANID= 0xFFFF \r\n
set up	AT+ PANID = 0x3E44	PANID= 0x3E44 \r\n

8.1.7 Network Short Address

AT command: network address		
	enter	return
Query	AT+ADDR?	ADDR=addr_asc\r\n
parameter	addr_asc: Network short address, ASCII code format, representing 4 hexadecimal numbers .	
	addr_asc (ASCII format)	Short URL
	0xFFFE	Invalid short address, no network (default).
	0x0000	Coordinator short address.
	0x0001~0xFFF7	Valid short address, non-coordinator (networking).
	0xFFF8~0xFFFF	The address is reserved and will not appear.
illustrate	1. When no network is established, the network address is 0xFFFE. 2. After the coordinator establishes the network, its own network address is 0x0000. The network addresses of routers, terminal nodes, and dormant nodes are assigned by the coordinator after they enter the network, and they do not have the authority to set or modify them. 3.0xFFFC, 0xFFFD, 0xFFFF are broadcast addresses, 0xFFF8 to 0xFFFB are reserved addresses, and these addresses are not assigned to devices. 4. When the number of networks reaches a high level, there will be a certain probability that the network addresses of two nodes are the same, and the network address will jump.	
Example		
	enter	return
Query	AT+ADDR?	ADDR= 0xECFF \r\n

8.1.8 Network Key

AT command: Network key		
	enter	return
Query	AT+KEY?	KEY=key_asc\r\n
parameter	key_asc: Network key, in ASCII code format, representing 32 hexadecimal digits.	
illustrate	The coordinator randomly generates a key when establishing a network. Routers, terminal nodes, and dormant terminals obtain keys from the coordinator after joining the coordinator. The key of a module that is not networked is "00000000000000000000000000000000".	
Example		
	enter	return
Query	AT+KEY?	KEY= EE23333E1DFE6E6C7EB0155B3D99B404 \r\n

8.1.9 Group (multicast) control

AT command: group (multicast) control		
	enter	return

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Query added group	AT+GROUP?	GROUP=group_list_asc\r\n
Join Group	AT+GROUP=1,group_id_asc	GROUP=group_list_asc\r\n
Exit Group	AT+GROUP=0,group_id_asc	GROUP=group_list_asc\r\n
parameter	group_id_asc: group number, ASCII code format , representing 4 hexadecimal numbers. For example, "0x0001", the valid range is "0x0001~0xFFFE" group_list_asc: group list, ASCII code format, representing 4 hexadecimal numbers. For example, "[0x0001,x0002]", arrays are separated by commas. When the device is not added to any group, the "[]" is empty.	
illustrate	1. After a non-sleeping device joins a group, it can receive multicast messages sent by any device to the group. 2. Dormant terminal nodes cannot receive multicast messages. 3. Each device can only join 8 different groups at most.	
Example		
	enter	return
Query added group	AT+GROUP?	GROUP= [0x0001] \r\n, when not joining any group, returns GROUP= [] \r\n
Join Group	AT+GROUP=1, 0x0002	GROUP = [0x0001,0x0002] \r\n
Exit Group	AT+GROUP=0, 0x0001	GROUP= [0x0002] \r\n

8.1.10 Extended Network ID (EPANID)

AT command: Extended PANID		
	enter	return
Query	AT+EPANID?	EPANID=epanid_asc\r\n
set up	AT+EPANID=epanid_asc	EPANID=epanid_asc\r\n
parameter	epanid_asc: Extended network ID, in ASCII format, representing 16 hexadecimal digits, such as "EF0FC532004B1200".	
illustrate	1. The default value of the extended PANID is "0000000000000000". After the coordinator creates a network, it uses its own MAC (LSB little-endian format) as the extended PANID. The coordinator can freely set a different extended PANID after each factory reset to indicate that the network created this time is different from the last one. 2. Routers, terminal nodes, and dormant terminals can freely join any coordinator using the default extended PANID. After setting the extended PANID, they can only join the coordinator of the extended PANID.	
Example		
	enter	return
Query	AT+EPANID?	EPANID= EF0FC532004B1200 \r\n
set up	AT+EPANID= EF0FC532004B1200	EPANID= EF0FC532004B1200 \r\n

8.1.11 Reset

AT command: reset		
	enter	return
implement	AT+RESET	status_asc\r\n
parameter	status_asc (ASCII format)	state
	OK	Operation is effective
illustrate	After returning "OK", the system will reset.	
Example		
	enter	return
implement	AT+RESET	OK\r\n

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.12 System Printing

<table>
<tr><td colspan="3">AT command: system print</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+MSG?</td><td>MSG=msg_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+MSG=msg_asc</td><td>MSG=msg_asc\r\n</td></tr>
<tr><td>parameter</td><td colspan="2">msg_asc: single character in ASCII format, 0 or 1
<table>
<tr><td>msg_asc (ASCII format)</td><td>System Printing</td></tr>
<tr><td>0</td><td>Off (default)</td></tr>
<tr><td>1</td><td>Open</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td colspan="2">This function can turn on or off the system printing information in transfer mode.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+MSG?</td><td>MSG= 0 \r\n</td></tr>
<tr><td>set up</td><td>AT+MSG= 1</td><td>MSG= 1 \r\n</td></tr>
</table>

8.1.13 Heartbeat Packet Cycle

<table>
<tr><td colspan="3">AT command: heartbeat packet cycle</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+HEART?</td><td>HEART=heart_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+HEART=heart_asc</td><td>HEART=heart_asc\r\n</td></tr>
<tr><td>parameter</td><td colspan="2">heart_asc: heartbeat packet period, ASCII code format, represents a decimal number, value range 1~65535, default value 300, unit second</td></tr>
<tr><td>illustrate</td><td colspan="2">1. The content of the heartbeat packet is the module's ZCL attribute "custom ID number". The coordinator can output and print the heartbeat packet in HEX command mode.
2. When the heartbeat packet period is set to 65535, turn off the heartbeat packet.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+HEART?</td><td>HEART= 300 \r\n</td></tr>
<tr><td>set up</td><td>AT+HEART= 180</td><td>HEART= 180 \r\n</td></tr>
</table>

8.1.14 Transmit power

<table>
<tr><td colspan="3">AT command: transmit power</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+POWER?</td><td>POWER=power_asc\r\n</td></tr>
<tr><td>set up</td><td>AT+POWER=power_asc</td><td>POWER=power_asc\r\n</td></tr>
<tr><td>parameter</td><td colspan="2">power_asc: Transmit power value, ASCII code format, range 0~5, default value 5.
<table>
<tr><td>power_asc</td><td>Power value (dBm)</td></tr>
<tr><td>0</td><td>-5</td></tr>
<tr><td>1</td><td>0</td></tr>
<tr><td>2</td><td>10</td></tr>
<tr><td>3</td><td>14</td></tr>
<tr><td>4</td><td>17</td></tr>
<tr><td>5</td><td>20</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td colspan="2">none</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+POWER?</td><td>POWER= 5 \r\n</td></tr>
<tr><td>set up</td><td>AT+POWER= 0</td><td>POWER= 0 \r\n</td></tr>
</table>

8.1.15 Firmware version

AT command: Firmware version

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	enter	return
Query	AT+FWCODE?	FWCODE=wcode_asc\r\n
parameter	fwcode_asc: Firmware version string, such as "7515-0-10".	
illustrate	none	
Example		
	enter	return
Query	AT+FWCODE?	FWCODE= 7515-0-10 \r\n

8.1.16 Return short address based on MAC address

AT command: return short address based on MAC address		
	enter	return
set up	AT+QRYADDR=mac_asc_input	MAC= mac_asc,ADDR=addr_asc\r\n
parameter	mac_asc_input: MAC address, in ASCII format, representing 16 hexadecimal digits, with ":" separating every two hexadecimal digits, for example, "00:12:4B:00:32:C5:0F:EF". The MAC address input in ASCII format is in MSB big-endian format. mac_asc: The returned MAC address is in ASCII code format, representing 16 hexadecimal digits. Every two hexadecimal digits are separated by ":", for example, "00:12:4B:00:32:C5:0F:EF". The MAC address entered in ASCII code format is in MSB big-endian format. addr_asc: Returns a short address in ASCII format, representing 4 hexadecimal digits, such as "0x1234".	
illustrate	1. If the device corresponding to the MAC address is not found, the short address "0xFFFE" is returned. 2. If the corresponding device is found, the command will be returned immediately. If the corresponding device is not found, the command will be returned after about 6 seconds.	
Example		
	enter	return
Query	AT+QRYADDR= 00:12:4B:00:32:C5:0F:EF	MAC= 00:12:4B:00:32:C5:0F:EF ,ADDR= 0x1234 \r\n

8.1.17 Exit the network

AT command: exit network			
	enter	return	
implement	AT+LEAVE	status_asc\r\n	
parameter	status_asc (ASCII format)	state	
	OK	Operation is effective	
	NO_NWK	Currently not connected to the network	
illustrate	none		
Example			
	enter	return	
implement	AT+LEAVE	OK\r\n	

8.1.18 Factory Reset

AT command: factory reset		
	enter	return
implement	AT+RESTORE	status_asc\r\n
parameter	status_asc (ASCII format)	state
	OK	Operation is effective
illustrate	none	
Example		

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	enter	return
implement	AT+RESTORE	OK\r\n

8.1.19 Coordinator closes the network configuration

AT command: Coordinator turns off network configuration		
	enter	return
implement	AT+CLOSE	status_asc\r\n
parameter	status_asc (ASCII format)	state
	OK	Operation is effective
illustrate	none	
Example		
	enter	return
implement	AT+CLOSE	OK\r\n

8.1.20 Exit command mode (exit HEX/AT mode to transmission mode)

AT command: Coordinator turns off network configuration		
	enter	return
implement	AT+EXIT	status_asc\r\n
parameter	status_asc (ASCII format)	state
	OK	Operation is effective
illustrate	none	
Example		
	enter	return
implement	AT+EXIT	OK\r\n

8.1.21 Serial port mode configuration

AT command: serial port mode configuration		
	enter	return
Query	AT+ UART ?	UART=uart_asc_0,uart_asc_1,uart_asc2 \r\n
set up	AT+UART=uart_asc_0,uart_asc_1,uart_asc2	UART=uart_asc_0,uart_asc_1,uart_asc2 \r\n

parameter

uart_asc_0: baud rate, ASC format, range 0~7

uart_asc_0 (ASC format)	Baud rate
0	2400
1	4800
2	9600
3	19200
4	38400
5	57600
6	115200 (default)
7	230400

uart_asc_1: stop bit, ASC format, range 0~1

uart_asc_ 1 (ASC format)	Stop bits
0	1 bit (default value)
1	2bit

uart_asc2 : check bit, ASC format, range 0~2

uart_asc_ 2 (ASC format)	Check digit
0	No validation (default)
1	Odd Parity
2	Even parity

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

illustrate	1. This setting triggers automatic restart 2. If the parameter setting exceeds the maximum value, the maximum value is directly applied. For example, if the baud rate is set to 8, the baud rate is forced to be set to 7, which corresponds to 230400.

Example

	enter	return
Query	AT+ UART ?	UART= 6,0,0 \r\n
set up	AT+UART= 7,1,2	UART= 7,1,2 \r\n

8.1.22 Target Address

AT command: target address

	enter	return
Query	AT+ DSTADDR ?	DSTADDR=dstaddr_asc \r\n
set up	AT+DSTADDR=dstaddr_asc	DSTADDR=dstaddr_asc \r\n
parameter	dstaddr_asc: transparent transmission destination address ASCII code format, 4-character hexadecimal format starting with "0x", such as "0x1234"	
illustrate	The target address in transparent transmission mode, the default value is "0xFFFF", which means broadcast mode.	

Example

	enter	return
Query	AT+ DSTADDR ?	DSTADDR = 0xFFFF \r\n
set up	AT+DSTADDR= 0x1234	DSTADDR = 0x1234 \r\n

8.1.23 Destination Port

AT command: target port

	enter	return
Query	AT+ DSTEP ?	DSTEP=dstep_asc \r\n
set up	AT+DSTEP=dstep_asc	DSTEP=dstep_asc \r\n
parameter	dstep_asc: transparent transmission target port ASCII code format, 2-character hexadecimal format starting with "0x", such as "0xFF"	
illustrate	1. During multicast, the destination port is set to 0x00 and the destination address is set to the corresponding group number. 2. It is recommended to set the destination port to 0x01 for unicast and 0xFF for broadcast.	

dstep_asc (ASCII code format)	Destination Port Description
0x00	Multicast
0x01	Unicast
0x02~0xFE	reserve
0xFF	Broadcast (default)

Example

	enter	return
Query	AT+ DSTEP ?	DSTEP= 0xFF \r\n
set up	AT+DSTEP= 0x01	DSTEP= 0x01 \r\n

8.1.24 Transmission Mode

AT command: transfer mode

	enter	return
Query	AT+ MODE ?	MODE=mode_asc \r\n
set up	AT+MODE=mode_asc	MODE=mode_asc \r\n

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td>parameter</td><td>mode_asc: Transmission mode ASCII code format, decimal format.
<table>
<tr><td>mode_asc (ASCII code)</td><td>Transmission Mode</td></tr>
<tr><td>0</td><td>Direct sending mode: no routing forwarding, how far it can be sent depends on the module power, and it cannot be sent to sleeping devices.</td></tr>
<tr><td>1 (default)</td><td>Transparent transmission: Input data is sent directly to the target defined by the target address and target port.</td></tr>
<tr><td>2</td><td>Transparent transmission with automatic retransmission: Same as mode 1, with automatic retransmission mechanism. After turning on "system printing", the delay can be seen from the returned information.</td></tr>
<tr><td>3</td><td>Semi-transparent transmission: The first 3 bytes of the input data are the target address (HEX format LSB little-endian format) and the target port, and the subsequent data is the message content to be transmitted.</td></tr>
<tr><td>4</td><td>Translucent transmission with automatic retransmission: Same as mode 3, with automatic retransmission mechanism. After turning on "system printing", the delay can be seen from the returned information.</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td>none</td></tr>
<tr><td colspan="2">Example</td></tr>
</table>

	enter	return
Query	AT+ MODE ?	MODE= 1 \r\n
set up	AT+MODE= 0	MODE= 0 \r\n

8.1.25 Sleep Mode

<table>
<tr><td colspan="3">AT command: Sleep mode</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ SLEEP ?</td><td>SLEEP=sleep_asc \r\n</td></tr>
<tr><td>set up</td><td>AT+SLEEP=sleep_asc</td><td>SLEEP=sleep_asc \r\n</td></tr>
<tr><td>parameter</td><td colspan="2">sleep_asc: sleep mode ASCII code format, decimal format, range 0~6 or 60.
<table>
<tr><td>sleep_asc (ASCII code)</td><td>Sleep Mode</td></tr>
<tr><td>0</td><td>Always dormant, no synchronization with the parent node occurs.</td></tr>
<tr><td>1~6 (default 1)</td><td>Wake up every 1 to 6 seconds to receive parent node data.</td></tr>
<tr><td>60</td><td>Wake up every 60 seconds and synchronize the parent node records.</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td colspan="2">1. The dormant node needs to receive data. The setting range is 1 to 6. The larger the value, the worse the real-time performance of the received data and the higher the packet loss rate.
2. Set to 0 or 60, data cannot be received, but the low power consumption effect is better.
3. The sleep mode of the sleeping node can be modified dynamically, so that it wakes up frequently during the time period when it needs to receive data, and sleeps for a long time during the time period when it does not need to receive data.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ SLEEP ?</td><td>SLEEP = 1 \r\n</td></tr>
<tr><td>set up</td><td>AT+ SLEEP = 0</td><td>SLEEP = 0 \r\n</td></tr>
</table>

8.1.26 Custom Number

<table>
<tr><td colspan="3">AT command: custom number</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>AT+ MBID ?</td><td>MBID=mbid_asc \r\n</td></tr>
<tr><td>set up</td><td>AT+ MBID =mbid_asc</td><td>MBID=mbid_asc \r\n</td></tr>
<tr><td>parameter</td><td colspan="2">mbid_asc: ASCII code format of custom number, ranging from 0 to 255, default is 255.</td></tr>
<tr><td>illustrate</td><td colspan="2">The custom number will be included in the heartbeat packet and transmitted to the coordinator in the form of ZCL protocol.</td></tr>
<tr><td colspan="3">Example</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	enter	return
Query	AT+ MBID ?	MBID = 255 \r\n
set up	AT+ MBID = 1	MBID = 1 \r\n

8.1.27 Network access node table

AT command: Network node table		
	enter	return
Query single	AT+ NODE=node_idx	NODE= node_idx , ADDR= addr_asc ,MAC= mac_asc \r\n
Search all	AT+ NODE?	OK\r\n NODE= 0 , ADDR= addr_asc_0 ,MAC= mac_asc_0 \r\n … NODE= n , ADDR= addr_asc_n ,MAC= mac_asc_n \r\n
parameter	node_idx : The serial number of the node entering the network, valid from 0 to 199. addr_asc: short address of the node entering the network, 0x0000 to 0xFFF0 is valid mac_asc: MAC address of the access node short address of the nth node entering the network MAC address of the nth access node	
illustrate	Query a single access node and output the access node corresponding to the access node serial number. If there is no access node on the serial number or the access node is deleted, the corresponding short address and MAC address are invalid values. Query all networked nodes. The module continuously outputs all networked nodes and automatically skips the deleted node numbers.	
Example		
	enter	return
Query single	AT+ NODE= 0	NODE= 0 ,ADDR= 0xF21F ,MAC= A4.C1.38.FB.C0.6C.76.D4 \r\n
Search all	AT+NODE?	NODE= 0 ,ADDR= 0x0000 ,MAC= A4.C1.38.C6.FE.D2.18.CA \r\n NODE= 1 ,ADDR= 0xD047 ,MAC= A4.C1.38.05.91.57.5B.32 \r\n NODE= 2 ,ADDR= 0xB64B ,MAC= A4.C1.38.FF.42.B9.C1.A2 \r\n

8.1.2 8 Enumeration Nodes

AT command: Enumerate nodes		
	enter	return
Enumerate Nodes	AT+ ENUM=mac_addr	ENUM= mac_addr , ADDR= addr_asc \r\n
parameter	mac_asc: MAC address of the access node. addr_asc : short address of the node entering the network, 0x0000 to 0xFFF0 is valid.	
illustrate	When any node first joins the network, the coordinator automatically outputs its enumeration information and prints it out through the "enumeration notification" command (including AT command format and HEX command format). If the host computer does not save the information of the node's first access to the network, it is necessary to use this command to re-enumerate the device.	
Example		
	enter	return
Query	AT+ ENUM= A4:C1:38:FB:C0:6C:76:D4	ENUM = A4:C1:38:FB:C0:6C:76:D4,ADDR=0xF21F \r\n

8.1.29 Deleting a Node

AT command: delete node		
	enter	return
Deleting a Node	AT+ DEL=mac_asc	OK \r\n or FAIL\r\n

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

parameter	mac_asc: MAC address of the deleted node.
illustrate	If the deleted node exists in the table of connected nodes, it will return OK. The coordinator will send a kick command regardless of whether the node is in the table. If the coordinator receives node data that is not in this table, it can delete it with this command.
Example	

	enter	return
Query	AT+DEL= A4:C1:38:FF:42:B9:C1:A2	OK \r\n

8.2 HEX Commands——Local Configuration

Each HEX command starts with FE, the second byte is the command length, the third byte is the command type, the fourth byte is the command code, and the fifth byte and below are the input command parameters. Each HEX command ends with AA, and the command length includes the command end AA.

Each HEX command has a return command. The return command starts with FB. The second byte is the command length. The third byte is the command type, which is the same as the input command. The fourth byte is the command code, which is the same as the input command. The fifth byte and the following are the return command parameters. Each HEX command ends with AA, and the command length includes the command end AA.

8.2.1 Local MAC address:

HEX command: Local MAC		
	enter	return
Query	FE 03 00 00 AA	FB 0B 00 00 mac_hex AA
parameter	mac_hex: 8-byte HEX array of MAC address, for example, E3 60 D0 1A 00 4B 12 00. The HEX format MAC address is output in LSB little-endian format.	
illustrate	none	
Example		
	enter	return
Query	FE 03 00 00 AA	FB 0B 00 00 E3 60 D0 1A 00 4B 12 00 AA

8.2.2 Network Status

HEX command: Network status		
	enter	return
Query	FE 03 00 01 AA	FB 0 4 00 0 1 nwk _hex AA
parameter	nwk_hex: network status, HEX format, range 00~02	

nwk_hex (HEX format)	state
00	No network
01	Networked
02	Network established but offline

illustrate	none	
Example		
	enter	return
Query	FE 03 00 01 AA	FB 04 00 01 01 AA

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.3 Networking

HEX command: Networking		
	enter	return
implement	FE 03 00 02 AA	FB 0 4 00 0 2 status _hex AA
parameter	status_hex: network status, HEX format status_hex (ASCII format) / state 00 / Operation is effective FF / Invalid operation	
illustrate	1. The coordinator executes this command for the first time to create a network, and executes this command thereafter to open the network and accept new devices to join the network. 2. This command is valid for routers, terminal nodes, and dormant terminals that are not connected to the network. This command is invalid for routers that are connected to the network. 3. The return of "Operation is valid" only means that the network has started, not that the network has been successfully established. To determine whether the network is successful, please use "Query Network Status" or receive asynchronous commands.	
Example		
	enter	return
implement	FE 03 00 02 AA	FB 04 00 02 00 AA

8.2.4 Network roles

HEX command: Network role		
	enter	return
Query	FE 03 00 03 AA	FB 04 00 03 dev_hex AA
set up	FE 04 00 03 dev_hex AA	FB 04 00 03 dev_hex AA
parameter	dev_hex: network role, HEX format, range 00~03 dev_hex (HEX format) / Network Role 00 / Coordinator 01 / router 02 / Endpoints 03 / Sleep terminal (default)	
illustrate	1. The coordinator module and the router module cannot switch roles, but the terminal node and the dormant terminal can switch between each other. 2. After modifying the network role, you need to restart the module to take effect. 3. Modifying the role after networking will cause network disconnection and network clearing.	
Example		
	enter	return
Query	FE 03 00 03 AA	FB 04 00 03 03 AA
set up	FE 04 00 03 01 AA	FB 04 00 03 01 AA

8.2.5 Network Channel

HEX command: Network channel		
	enter	return
Query	FE 03 00 04 AA	FB 04 00 04 ch_hex AA
set up	FE 04 00 04 ch_hex AA	FB 04 00 04 ch_hex AA
parameter	ch_hex: channel, maximum value FF. ch_hex (HEX format) / Channel 0B~1A / Fixed scanning of a single channel FE / Scan channels 11, 14, 15, 19, 20, 24, 25 simultaneously FF / Scan channels 11 to 26 simultaneously (default) other / Invalid channel, do not change the current value	
illustrate	1. Set the channel to the scanning channel during networking, not the real channel. 2. The coordinator can establish a network using a fixed channel 3. Routers, terminal nodes, and dormant terminals scan a single channel and join the channel coordinator	

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	first. If there is no suitable coordinator for the channel, they may join other channel coordinators.

Example

	enter	return
Query	FE 04 00 04 AA	FB 04 00 04 FF AA
set up	FE 04 00 04 0B AA	FB 04 00 04 0B AA

8.2.6 PANID (Network ID)

HEX command: PANID

	enter	return
Query	FE 03 00 05 AA	FB 05 00 05 panid _hex AA
set up	FE 05 00 05 panid_hex AA	FB 05 00 05 panid _hex AA

parameter: panid_hex: PANID in HEX format, LSB little endian format. For example, "0x1234" is "34 12" in HEX instruction.

panid_hex (HEX format)	PANID
FF FF	Random PANID (default)
other	Fixed PANID

illustrate:
1. The coordinator generates a random PANID or a fixed PANID.
2. After setting a fixed PANID, routers, terminal nodes, and dormant terminals can only join the coordinator of the PANID.

Example

	enter	return
Query	FE 03 00 05 AA	FB 05 00 05 FF FF AA
set up	FE 05 00 05 44 3E AA	FB 05 00 05 44 3E AA

8.2.7 Network Address

HEX command: network address

	enter	return
Query	FE 03 00 06 AA	FB 04 00 06 addr_hex AA

parameter: addr_hex: network address in HEX format, LSB little endian format. For example, "0x1234" is "34 12" in the HEX instruction.

addr_hex (HEX format)	Short URL
FE FF	Invalid short address, no network (default)
00 00	Coordinator short address.
01 00 ~ F7 FF	Valid short address, non-coordinator (networking).
F8 FF ~ FF FF	The address is reserved and will not appear.

illustrate:
1. When no network is established, the network address is "FE FF".
2. After the coordinator establishes the network, its own network address is "00 00". The network addresses of routers, terminal nodes, and dormant nodes are assigned by the coordinator after they enter the network, and the coordinator does not have the authority to set or modify them.
3. "FC FF", "FD FF", and "FF FF" are broadcast addresses, and "F8 FF" to "FF FF" are reserved addresses. These addresses are not assigned to any device.
4. When the number of networks reaches a high level, there will be a certain probability that the network addresses of two nodes are the same, and the network address will jump.

Example

	enter	return
Query	FE 03 00 06 AA	FB 04 00 06 FF EC AA

8.2.8 Network Key

HEX command: Network key

	enter	return

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Query	FE 03 00 07 AA	FB 13 00 07 key_hex AA
parameter	key_hex: 16-byte key, which can be treated as an array "uint8 key[16]".	
illustrate	The coordinator randomly generates a key when establishing a network. Routers, terminal nodes, and dormant terminals obtain keys from the coordinator after joining the coordinator. The keys of modules that are not networked are all arrays of 16 "00s".	
Example		
	enter	return
Query	FE 03 00 07 AA	FB 13 00 07 EE 23 33 3E 1D FE 6E 6C 7E B0 15 5B 3D 99 B4 04 AA

8.2.9 Group (multicast) control

HEX command: group (multicast) control		
	enter	return
Query added group	FE 03 00 08 AA	FB len 00 08 group_list_hex AA
Join Group	FE 06 00 08 01 group_id_hex AA	FB len 00 08 group_list_hex AA
Exit Group	FE 06 00 08 00 group_id_hex AA	FB len 00 08 group_list_hex AA
parameter	group_id_hex: group number, HEX format, LSB little endian format. For example, the group number "0x0001" is "01 00" in the HEX instruction. len: The length of the returned command is variable, and the actual value is determined by the content length of group_list_hex. group_list_hex: group number list, which can be treated as a uint16 array. For example, when the group number is an array of "[0x0001, 0x0002]", it is "01 00 02 00" in the HEX command. When the module is not added to any group, this field is empty and has no content.	
illustrate	1. After a non-sleeping device joins a group, it can receive multicast messages sent by any device to the group. 2. Dormant terminal nodes cannot receive multicast messages.	
Example		
	enter	return
Query added group	FE 03 00 08 AA	FB 05 00 08 01 00 AA
Join Group	FE 06 00 08 01 02 00 AA	FB 07 00 08 01 00 02 00 AA
Exit Group	FE 06 00 08 00 01 00 AA	FB 03 00 08 AA

8.2.10 Extended PANID

HEX command: Extended PANID		
	enter	return
Query	FE 03 00 09 AA	FB 0B 00 09 epanid_hex AA
set up	FE 0B 00 09 epanid_hex AA	FB 0B 00 09 epanid_hex AA
parameter	epanid_hex: HEX format of extended PANID, 8 bytes in total, for example "EF 0F C5 32 00 4B 12 00".	
illustrate	1. The default value of the extended PANID is "00 00 00 00 00 00 00 00". After the coordinator creates a network, it uses its own MAC (LSB little-endian format) as the extended PANID. The coordinator can freely set a different extended PANID after each factory reset to indicate that the network created this time is different from the last one. 2. Routers, terminal nodes, and dormant terminals can freely join any coordinator using the default extended PANID. After setting the extended PANID, they can only join the coordinator of the extended PANID.	
Example		
	enter	return
Query	FE 03 00 09 AA	FB 0B 00 05 EF 0F C5 32 00 4B 12 00 AA

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

set up	FE 0B 00 09 EF 0F C5 32 00 4B 12 00 AA	FB 0B 00 05 EF 0F C5 32 00 4B 12 00 AA

8.2.11 Reset

HEX command: reset		
	enter	return
implement	FE 03 00 0A AA	FB 04 00 0A status_hex AA
parameter	status_hex (HEX format) / 00 → state / Operation is effective	
illustrate	none	
Example		
	enter	return
implement	FE 03 00 0A AA	FB 04 00 0A 00 AA

8.2.12 System Printing

HEX command: system print		
	enter	return
Query	FE 03 00 0B AA	FB 04 00 0B msg_hex AA
set up	FE 04 00 0B msg_hex AA	FB 04 00 0B msg_hex AA
parameter	msg_hex: single-byte parameter, 00 or 01 msg_hex (HEX format) / System Printing 00 / Off (default) 01 / Open	
illustrate	This function can turn on or off the system printing information in transfer mode.	
Example		
	enter	return
Query	FE 03 00 0B AA	FB 04 00 0B 00 AA
set up	FE 04 00 0B 01 AA	FB 04 00 0B 01 AA

8.2.13 Heartbeat Packet Cycle

HEX command: heartbeat packet cycle		
	enter	return
Query	FE 03 00 0C AA	FB 05 00 0C heart_hex AA
set up	FE 05 00 0C heart_hex AA	FB 05 00 0C heart_hex AA
parameter	heart_hex: 2-byte HEX format value, LSB little endian format, range "01 00" to "FF FF", default "2C 01" (converted decimal = 300), unit is seconds.	
illustrate	1. The content of the heartbeat packet is the module's ZCL attribute "custom ID number". The coordinator can output and print the heartbeat packet in HEX command mode. 2. When the heartbeat packet period is set to "FF FF", the heartbeat packet is turned off.	
Example		
	enter	return
Query	FE 03 00 0C AA	FB 05 00 0C 2C 01 AA
set up	FE 05 00 0C B4 00 AA	FB 05 00 0C B4 00 AA

8.2.14 Transmit power

HEX command: Transmit power		
	enter	return
Query	FE 03 00 0D AA	FB 04 00 0D power_hex AA
set up	FE 04 00 0D power_hex AA	FB 04 00 0D power_hex AA
parameter	power_hex: single byte in HEX format, corresponding to the module transmit power, range 00~05, corresponding to -5~20dbm, default value 05.	

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	power_asc	Power value (dBm)
	00	-5
	01	0
	02	10
	03	14
	04	17
	05	20
illustrate	This function can turn on or off the system printing information in transfer mode.	
Example		
	enter	return
Query	FE 03 00 0D AA	FB 04 00 0D 05 AA
set up	FE 04 00 0D 00 AA	FB 04 00 0D 00 AA

8.2.15 Firmware version

HEX command: Firmware version		
	enter	return
Query	FE 03 00 0E AA	FB 04 00 0E fwcode_hex AA
parameter	fwcode_hex: A single byte in HEX format represents the firmware version, a total of 4 bytes.	
illustrate	none	
Example		
	enter	return
Query	FE 03 00 0E AA	FB 04 00 0E 5B 10 02 0A AA

8.2.16 Return short address based on MAC address

HEX command: Return short address based on MAC address		
	enter	return
set up	FE 0B 00 10 mac_hex_input AA	FB 0D 00 10 mac_hex addr_hex AA
parameter	mac_hex_input: Enter the HEX format of the MAC address, LSB little endian format input, for example "EF 0F C5 32 00 4B 12 00" mac_hex: The HEX format of the returned MAC address, output in LSB little-endian format, for example "EF 0F C5 32 00 4B 12 00" addr_hex: The returned short address is in HEX format, LSB little endian format. For example, the address 0x1234 is represented as "34 12" in the HEX command.	
illustrate	1. If the device corresponding to the MAC address is not found, the short address "FE FF" is returned. 2. If the corresponding device is found, the command will be returned immediately. If the corresponding device is not found, the command will be returned after about 6 seconds.	
Example		
	enter	return
set up	FE 0B 00 10 EF 0F C5 32 00 4B 12 00 AA	FB 0D 00 0E EF 0F C5 32 00 4B 12 00 34 12 AA

8.2.17 Exit the network

HEX command: exit network		
	enter	return
implement	FE 03 00 11 AA	FB 04 00 11 status_hex AA
parameter	status_hex (HEX format)	state
	00	Operation is effective
illustrate	none	

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Example		
	enter	return
implement	FE 03 00 11 AA	FB 04 00 11 00 AA

8.2.18 Factory Reset

HEX command: factory reset		
	enter	return
implement	FE 03 00 12 AA	FB 04 00 12 status_hex AA
parameter	status_hex (HEX format)	state
	00	Operation is effective
illustrate	none	
Example		
	enter	return
implement	FE 03 00 12 AA	FB 04 00 12 00 AA

8.2.19 Coordinator closes the network configuration

HEX command: Coordinator turns off network configuration		
	enter	return
implement	FE 03 00 13 AA	FB 04 00 13 status_hex AA
parameter	status_hex (HEX format)	state
	00	Operation is effective
illustrate	none	
Example		
	enter	return
implement	FE 03 00 13 AA	FB 04 00 13 00 AA

8.2.20 Exit command mode (exit HEX/AT mode to transmission mode)

HEX command: Coordinator turns off network configuration		
	enter	return
implement	FE 03 00 14 AA	FB 04 00 14 status_hex AA
parameter	status_hex (HEX format)	state
	00	Operation is effective
illustrate	none	
Example		
	enter	return
implement	FE 03 00 14 AA	FB 04 00 14 00 AA

8.2.21 Serial port mode configuration

HEX command: Serial port mode configuration		
	enter	return
Query	FE 03 01 00 AA	FB 06 01 00 uart_hex_arry AA
set up	FE 06 01 00 uart_hex_arry AA	FB 06 01 00 uart_hex_arry AA

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td>parameter</td><td>uart_hex_arry: 3-byte array, HEX format

uart_hex_arry[0]: baud rate, range 00~07
<table>
<tr><td>uart_hex_arry[0] (HEX format)</td><td>Baud rate</td></tr>
<tr><td>00</td><td>2400</td></tr>
<tr><td>01</td><td>4800</td></tr>
<tr><td>02</td><td>9600</td></tr>
<tr><td>03</td><td>19200</td></tr>
<tr><td>04</td><td>38400</td></tr>
<tr><td>05</td><td>57600</td></tr>
<tr><td>06</td><td>115200</td></tr>
<tr><td>07</td><td>230400</td></tr>
</table>
uart_hex_arry[1]: stop bit, range 00~01
<table>
<tr><td>uart_hex_arry[1] (HEX format)</td><td>Stop bits</td></tr>
<tr><td>00</td><td>1bit</td></tr>
<tr><td>01</td><td>2bit</td></tr>
</table>
uart_hex_arry[2] : check digit, range 00~2
<table>
<tr><td>uart_hex_arry[2] (HEX format)</td><td>Check digit</td></tr>
<tr><td>00</td><td>No verification</td></tr>
<tr><td>01</td><td>Odd Parity</td></tr>
<tr><td>02</td><td>Even parity</td></tr>
</table></td></tr>
<tr><td>illustrate</td><td>1. This setting triggers automatic restart
2. If the parameter setting exceeds the maximum value, the maximum value is directly applied. For example, if the baud rate is set to "08", the baud rate is forced to be set to "07", which corresponds to 230400.</td></tr>
<tr><td colspan="2">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>FE 03 01 00 AA</td><td>FB 06 01 00 06 00 00 AA</td></tr>
<tr><td>set up</td><td>FE 06 01 00 07 01 02 AA</td><td>FB 06 01 00 07 01 02 AA</td></tr>
</table>

8.2.22 Target Address

<table>
<tr><td colspan="3">HEX command: target address</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>FE 03 01 01 AA</td><td>FB 05 01 01 dstaddr_hex AA</td></tr>
<tr><td>set up</td><td>FE 05 01 01 dstaddr_hex AA</td><td>FB 05 01 01 dstaddr_hex AA</td></tr>
<tr><td>parameter</td><td colspan="2">dstaddr_hex: transparent transmission destination address HEX format, LSB little endian format, for example, the address 0x1234 is "34 12" in the command</td></tr>
<tr><td>illustrate</td><td colspan="2">The target address in transparent transmission mode. The default value is "FF FF", which means broadcast mode.</td></tr>
<tr><td colspan="3">Example</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>FE 03 01 01 AA</td><td>FB 05 01 01 FF FF AA</td></tr>
<tr><td>set up</td><td>FE 05 01 01 34 12 AA</td><td>FB 05 01 01 34 12 AA</td></tr>
</table>

8.2.23 Destination Port

<table>
<tr><td colspan="3">HEX command: Target port</td></tr>
<tr><td></td><td>enter</td><td>return</td></tr>
<tr><td>Query</td><td>FE 03 01 02 AA</td><td>FB 04 01 02 dstep_hex AA</td></tr>
<tr><td>set up</td><td>FE 05 01 02 dstep_hex AA</td><td>FB 04 01 02 dstep_hex AA</td></tr>
<tr><td>parameter</td><td colspan="2">dstep_hex: Transparent transmission target port HEX format.
<table>
<tr><td>dstep_asc (ASCII code format)</td><td>Destination Port Description</td></tr>
</table></td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	00	Multicast
	01	Unicast
	02~FE	reserve
	FF	Port broadcast (default)
illustrate	1. When multicasting, the destination port is set to 00 and the destination address is set to the corresponding group number. 2. It is recommended to set the destination port to 01 for unicast and FF for broadcast.	
Example		
	enter	return
Query	FE 03 01 02 AA	FB 04 01 02 FF AA
set up	FE 04 01 02 01 AA	FB 04 01 02 01 AA

8.2.24 Transmission Mode

HEX command: transfer mode		
	enter	return
Query	FE 03 01 03 AA	FB 04 01 03 mode_hex AA
set up	FE 05 01 03 mode_hex AA	FB 04 01 03 mode_hex AA
parameter	mode_hex: Transmission mode HEX format.	
	mode_hex (HEX format)	Transmission Mode
	00	Direct sending mode: no routing forwarding, how far it can be sent depends on the module power, and it cannot be sent to sleeping devices.
	01 (default)	Transparent transmission: Input data is sent directly to the target defined by the target address and target port.
	02	Transparent transmission with automatic retransmission: Same as mode 1, with automatic retransmission mechanism. After turning on "system printing", the delay can be seen from the returned information.
	03	Semi-transparent transmission: The first 3 bytes of the input data are the target address (HEX format LSB little-endian format) and the target port, and the subsequent data is the message content to be transmitted.
	04	Translucent transmission with automatic retransmission: Same as mode 3, with automatic retransmission mechanism. After turning on "system printing", the delay can be seen from the returned information.
illustrate	none	
Example		
	enter	return
Query	FE 03 01 03 AA	FB 04 01 03 01 AA
set up	FE 04 01 03 00 AA	FB 04 01 03 00 AA

8.2.25 Sleep Mode

HEX command: Sleep mode		
	enter	return
Query	FE 03 01 04 AA	FB 04 01 04 sleep_hex AA
set up	FE 05 01 04 sleep _hex AA	FB 04 01 04 sleep_hex AA
parameter	sleep_hex: sleep mode HEX format, range 00~06 or 3C.	
	sleep_hex (HEX format)	Sleep Mode
	00	Always dormant, no synchronization with the parent node occurs.
	01~06 (default 01)	Wake up every 1 to 6 seconds to receive parent node data.
	3C	Wake up every 60 seconds and synchronize the parent node records.
illustrate	none	
Example		
	enter	return

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Query	FE 03 01 04 AA	FB 04 01 04 01 AA
set up	FE 04 01 04 00 AA	FB 04 01 04 00 AA

8.2.26 Custom Number

HEX command: custom number		
	enter	return
Query	FE 03 01 06 AA	FB 04 01 06 mbid_hex AA
set up	FE 05 01 06 mbid_hex AA	FB 04 01 06 mbid_hex AA
parameter	mbid_hex: HEX format of custom number, ranging from 00 to FF, default is FF.	
illustrate	The custom number will be included in the heartbeat packet and transmitted to the coordinator in the form of ZCL protocol.	
Example		
	enter	return
Query	FE 03 01 06 AA	FB 04 01 06 FF AA
set up	FE 04 01 06 01 AA	FB 04 01 06 01 AA

8.2.27 Network access node table

HEX command: Network access node table		
	enter	return
Query	FE 0 5 00 17 node_idx AA	FB 0F 00 17 node_idx addr_hex mac_hex AA
parameter	node_idx : the serial number of the node entering the network, 2- byte HEX format value, LSB little endian format, ranging from "00 00" to "C7 00". addr_hex: short address of the node entering the network, 2- byte HEX format value, LSB little-endian format, ranging from "00 00" to "F0 FF". mac_hex: MAC address of the access node, 8-byte HEX value, LSB little-endian format.	
illustrate	Query the nodes connected to the network on the coordinator, and you can also find the parent node and child node on the router.	
Example		
	enter	return
Query	FE 0 5 00 17 00 00 AA	FB 0F 00 1 7 00 00 34 12 EF 0F C5 32 00 4B 12 00 AA

8.2.28 Enumerating nodes

HEX command: Enumerate nodes		
	enter	return
Query	FE 0B 00 18 mac_hex AA	FB 0D 00 18 mac_hex addr_hex AA
parameter	mac_hex: MAC address of the access node, 8-byte HEX value, LSB little-endian format. addr_hex: short address of the node entering the network, 2- byte HEX format value, LSB little-endian format, ranging from "00 00" to "F0 FF".	
illustrate	When any node first joins the network, the coordinator automatically outputs its enumeration information and prints it out through the "enumeration notification" command (including AT command format and HEX command format). If the host computer does not save the information of the node's first access to the network, it is necessary to use this command to re-enumerate the device.	
Example		
	enter	return
Query	FE 0B 00 18 D4 76 6C C0 FB 38 C1 A4 AA	FB 0D 00 18 D4 76 6C C0 FB 38 C1 A4 1F F2 AA

8.2.29 Deleting a Node

HEX command: delete node		
	enter	return
delete	FE 0B 00 19 mac_hex AA	FB 04 00 19 status AA

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

parameter	mac_hex: MAC address of the access node, 8-byte HEX value, LSB little-endian format. status: execution status, 00 = deletion successful, other values = not in the table
illustrate	The deleted node returns a success status if it exists in the table of networked nodes. The coordinator will send a kick command regardless of whether the node is in the table. If the coordinator receives node data that is not in this table, it can delete it with this command.

Example		
	enter	return
delete	FE 0B 00 19 A2 C1 B9 42 FF 38 C1 A4 AA	FB 04 00 19 00 AA

8.3 Asynchronous commands and system printing information

Asynchronous commands are used to indicate external events of the module. In HEX command mode, commands starting with FC are printed. In data transmission or AT command mode, system printing needs to be turned on. External events will be converted into corresponding LOG information.

8.3.1 Module startup

Command Name	Module startup
HEX Commands	FC 04 00 00 boot_hex AA
HEX Parameters	boot_hex: boot code, 1 byte boot_hex: Startup Mode 00: Power on 01: Button reset 02: Watchdog soft reset
HEX Command Examples	Press the module reset button FC 04 00 00 01 AA
System Printing	BOOT= boot_log \r\n
System printing parameters	boot_log: corresponding to the startup mode boot_log: Startup Mode PWR_ON: Power on RESET: Button reset WDT: Watchdog soft reset
System Printing Example	Press the module reset button "BOOT= RESET \r\n"

8.3.2 Network connection status

Command Name	Network connection status
HEX Commands	FC 04 00 01 nwk_status_hex AA
HEX Parameters	nwk_status_hex: network connection status, 1 byte nwk_status_hex: Network connection status 00: Screening failed 01: Network successfully joined/network opened 02: Restore network connection

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td></td><td>
<table>
<tr><td>03</td><td>Orphan nodes (offline)</td></tr>
<tr><td>04</td><td>Leave the network</td></tr>
</table>
</td></tr>
<tr><td>HEX Command Examples</td><td>The terminal node is offline:
FC 04 00 01 04 AA</td></tr>
<tr><td>System Printing</td><td>nwk_status_log \r\n</td></tr>
<tr><td>System printing parameters</td><td>nwk_status_log: corresponding startup mode
<table>
<tr><td>boot_log</td><td>Network connection status</td></tr>
<tr><td>NWK_FAIL</td><td>Screening failed</td></tr>
<tr><td>NWK_JOINED</td><td>Network successfully joined/network opened</td></tr>
<tr><td>NWK_LINK</td><td>Restore network connection</td></tr>
<tr><td>NWK_ORPHAN</td><td>Orphan nodes (offline)</td></tr>
<tr><td>NWK_LEAVE</td><td>Leave the network</td></tr>
</table>
</td></tr>
<tr><td>System Printing Example</td><td>The terminal node is offline:
"NWK_ORPHAN\r\n"</td></tr>
<tr><td>illustrate</td><td>1. When the coordinator opens the network, it will print the "Network Joined Successfully" status.
2. Orphan nodes only occur in terminal nodes and dormant terminals. As long as there are coordinators and routers, terminal nodes and dormant terminals can restore the connection.
3. For modules that have been connected to the network, as long as they do not actively exit the network, they will immediately trigger "restoring network connection" or become orphan nodes after powering on again.</td></tr>
</table>

8.3.3 Monitoring equipment access to the network

<table>
<tr><td>Command Name</td><td>Monitoring equipment access to the network</td></tr>
<tr><td>HEX Commands</td><td>FC 0E 00 02 join_mac_hex join_addr_hex join_mode_hex AA</td></tr>
<tr><td>HEX Parameters</td><td>join_mac_hex: 8 bytes, MAC address of the networked device, LSB little endian format.

join_addr_hex: 2 bytes, network address of the networked device, LSB little endian format.

join_mode_hex: 1 byte, network joining mode.
<table>
<tr><td>join_mode_hex</td><td>Network access mode</td></tr>
<tr><td>0</td><td>First time online</td></tr>
<tr><td>1</td><td>Device online notification</td></tr>
</table>
</td></tr>
<tr><td>HEX Command Examples</td><td>A device with a MAC address of 00:12:4B:00:1A:D0:60:E3 is connected to the network and is assigned a network address of 0xECFF.
FC 0E 00 03 E3 60 D0 1A 00 4B 12 00 FFEC 00 AA</td></tr>
<tr><td>System Printing</td><td>join_mode_asc MAC= mac_asc ,ADDR= addr_asc \r\n</td></tr>
<tr><td>System printing parameters</td><td>join_mode_asc: network access mode, string format
<table>
<tr><td>join_mode_asc</td><td>Network access mode</td></tr>
<tr><td>JOIN</td><td>First time online</td></tr>
<tr><td>LINK</td><td>Device online notification</td></tr>
</table>
</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	mac_asc: ASCII code string of the MAC address. Each character is separated by a hyphen (:), for example, "00:12:4B:00:1A:D0:60:E3". addr_asc: network address of the networked device, in ASCII format, hexadecimal data starting with "0x", such as "0xECFF"
System Printing Example	A device with a MAC address of 00:12:4B:00:1A:D0:60:E3 is connected to the network and is assigned a network address of 0xECFF. " JOIN MAC= 00:12:4B:00:1A:D0:60:E3 ,ADDR= 0xECFF \r\n"
illustrate	1. When any device accesses the network for the first time, the coordinator will output "First access to the network", and the coordinator and router will output "Device online notification". 2. When a device that has been connected to the network is restarted, the coordinator and router will receive a "device online notification".

8.3.4 Monitoring equipment off-grid

Command Name	Monitoring equipment off-grid
HEX Commands	FC 0B 00 03 dev_mac_hex AA
HEX Parameters	dev_mac_hex: 8 bytes, MAC address of the off-network device, LSB little-endian format.
HEX Command Examples	The device with MAC address 00:12:4B:00:1A:D0:60:E3 has left the network. FC 0B 00 03 E3 60 D0 1A 00 4B 12 00 AA
System Printing	LEAVE=mac_asc\r\n
System printing parameters	mac_asc: ASCII code string of the MAC address. Each character is separated by a hyphen (:), for example, "00:12:4B:00:1A:D0:60:E3".
System Printing Example	The device with MAC address 00:12:4B:00:1A:D0:60:E3 has left the network. "LEAVE= 00:12:4B:00:1A:D0:60:E3 "
illustrate	none

8.3.5 Device Enumeration Notification

Command Name	Monitoring equipment access to the network
HEX Commands	FC 13 00 0 4 finish_flag endpoint_hex mac_hex addr_hex profile_hex device_hex AA
HEX Parameters	finish_flag: end mark, 1 byte, indicating the last enumeration information of this node. sn_hex: device enumeration serial number, 9 bytes, LSB format. A node can be identified as multiple virtual devices, such as data transparent interface, PWM interface, and the device enumeration serial number can be used to identify the uniqueness of the virtual device. addr_hex: short address, 2 bytes, LSB format, the network short address of the node. endpoint_hex: port number, 1 byte, port number on the node. There may be multiple enumeration information for the same node. profile_hex: protocol profile, 2 bytes, used to mark the communication protocol type, data transmission equipment is "04 01". device_hex: device type, 2 bytes, used to identify the function of the node, the wireless module is "00 F0".
HEX Command Examples	A device with a MAC address of A4:C1:38:FB:C0:6C:76:D4 is connected to the network and is assigned a network address of 0xF21F. FC 13 00 0 4 01 01 D4 76 6C C0 FB 38 C1 A4 1F F2 04 01 00 F0 AA
System Printing	DEVICE ENUM:\r\n SN= sn_asc \r\n ADDR= addr_asc \r\n

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	EP= endpoint_asc \r\n Profile = profile_asc \r\n Device ID= device_asc \r\n (EUNM FINISH: mac _asc \r\n)
System printing parameters	sn_ asc : Device enumeration serial number, 9 -digit hexadecimal number. A node can be identified as multiple virtual devices, such as data transparent interface, PWM interface, and the device enumeration serial number can be used to identify the uniqueness of the virtual device. addr_asc: The network short address of the node. endpoint_asc: port number. There may be multiple enumeration information for the same node. profile_asc: Protocol profile, used to mark the communication protocol type, and the data transmission device is "0x0104". device_asc: device type, used to identify the function of the node, the wireless module is "0xF000". mac _asc: Node MAC address, used to indicate that all enumeration information of the node has been printed.
System Printing Example	DEVICE ENUM:\r\n SN= A4 C1 38 FB C0 6C 76 D4 01 \r\n ADDR = 0xF21F \r\n EP= 0x01 \r\n Profile = 0x0104 \r\n Device ID = 0xF000 \r\n EUNM FINISH: A4:C1:38:FB:C0:6C:76:D4 \r\n
illustrate	1. The coordinator will automatically identify the enumeration information when the node first enters the network. The coordinator can output the enumeration information by turning on the debugging function in HEX instruction mode or transmission command mode. 2. If you missed the automatic enumeration information when the node first joined the network, you can use the "enumerate nodes" command of AT or HEX command to get the node enumeration information again.

8.4 Remote Control Commands

Remote control commands are used for wireless control between devices, including wireless communication. Remote control commands only have HEX command format, not AT command format. Therefore, remote control commands have good backward compatibility.

8.4.1 HEX command to send data

<table>
<tr><td colspan="3">HEX command to send data</td></tr>
<tr><td>Function</td><td colspan="2">In HEX command mode, data is sent to the specified target device, and the data message and transmission mode are compatible.</td></tr>
<tr><td rowspan="2">Format</td><td>enter</td><td>return</td></tr>
<tr><td>FE len 02 0F dst_addr dst_ep ack_mode send_data AA</td><td>FB 04 02 0F rf_status AA</td></tr>
<tr><td>parameter</td><td colspan="2">Enter the command parameters:
len: frame length occupies one byte, and the frame length is determined by the entire command parameter

dst_addr: destination address, 2 bytes, LSB little endian format. In multicast mode, the destination address is the LSB little endian format of the group number.
<table>
<tr><td>dst_addr (HEX format)</td><td>Destination address sending method</td></tr>
<tr><td>00 00 ~ F7 FF</td><td>Unicast mode</td></tr>
<tr><td>F8 FF ~ FB FF</td><td>reserve</td></tr>
<tr><td>FC FF</td><td>Broadcast to coordinator, router</td></tr>
<tr><td>FD FF</td><td>Broadcast to coordinators, routers, and end nodes (non-sleeping)</td></tr>
<tr><td>FF FF</td><td>Broadcast to all devices, including dormant terminals</td></tr>
</table></td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

dst_ep: destination port, 1 byte

dst_ep (HEX format)	Destination port sending mode
00	Multicast
01	Unicast
02 ~ FE	reserve
FF	Port Broadcast

ack_mode: Response mode, 1 byte

ack_mode (HEX format)	Answer Mode
00	Receive asynchronous reply command. Receiving asynchronous reply command indicates that the data has been sent to the correct target.
01	Asynchronous response commands are not received, but the underlying layer generates automatic retransmissions, and the return command may have a large delay.
02	Asynchronous response commands are not received, and the underlying layer does not generate automatic retransmission.

send_data: The data message sent, the number of bytes of the data message = len-5, that is, excluding dst_addr, dst_ep, ack_mode and frame tail.

Returns the command's parameters:

rf_status: Send result

rf_status (HEX format)	Send results
00	Send successfully
01	Send invalid
10~13	Module memory overflow (input data speed exceeds wireless transmission speed)
B7	Data retransmission failed (response mode 1, return command delay increased, about 18 seconds)
C2	The module is not connected to the Internet or is offline.
CD	The destination does not exist
E1	Data packets are interfered by other wireless signals
E9	Data packet loss
F0	The data sent to the dormant terminal has timed out.
Other values	Unknown error

Notes

1. Use this command to send to the target device. If the target device is running in transmission mode, directly output the data in "send_data". If the target device is running in HEX command mode, the received content is output in HEX command format.
2. Due to the existence of multiple routing forwarding in the Zigbee network, sending data in response mode 0 can receive asynchronous response commands, and judge whether the target has received the data through the response command, and whether the target device receiving the data is the correct device. Sending data in response mode 1 can directly judge whether the data has reached the target based on the "rf_status" in the return command, but the return command delay is large, and it is impossible to judge whether the target is correct.

Command Examples

Send the data packet "31 32 33 34 35 36 37 38 39 30" to the device with the network address "0xE4E5" using unicast (destination port = 1), do not enable retransmission, and the return command indicates "send successful".

Send command: FE 11 02 0F E5 E4 01 00 31 32 33 34 35 36 37 38 39 30 AA
Return command: FB 04 02 0F 00 AA

8.4.2 HEX command receiving data

HEX command to receive data	
Function	In HEX command mode, data transmitted by other modules is received and the received content is output in HEX command format.
Format	Asynchronous reception

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	FC len 02 0F src_addr src_ep rx_rssi rx_data AA
parameter	**Parameters for asynchronous commands:** len: frame length occupies one byte, and the frame length is determined by the entire command parameter src_addr: source address, 2 bytes, LSB little endian format. dst_ep: source port, 1 byte. rx_rssi: data signal strength, 1 byte, converted to singed char format and then converted, for example, FF is converted to -1dmb. rx_data: received data message
Notes	none
Command Examples	The data packet "31 32 33 34 35 36 37 38 39 30" is received from the device 0xE4E5. The other party uses port 1 (data transmission port) to send the data packet. The signal strength RSSI of the data packet is 0xED, which is converted to -19dbm. Receive command: FC 11 02 0F E5 E4 01 ED 31 32 33 34 35 36 37 38 39 30 AA

8.4.3 HEX command receiving response command

HEX command receiving response command		
Function	Receiving the response command from the other device indicates that the other device has received the data.	
Format	Asynchronous reception	
	FC 08 02 0B src_addr src_ep rx_rssi status AA	
parameter	**Parameters for asynchronous commands:** src_addr: source address, 2 bytes, LSB little endian format. dst_ep: source port, 1 byte. rx_rssi: data signal strength, 1 byte, converted to singed char format and then converted, for example, FF is converted to -1dmb. status: response status, 1 byte, used to determine whether the other device supports the data transmission function.	
	status（HEX）	Status description
	00	The other device supports data transmission
	other	The other device does not support data transmission
Notes	If a response command with a status other than 00 is received, it is possible that other illegal devices have entered the network. The probability of this occurring is extremely low.	
Command Examples	After sending a data packet to the 0xE4E5 device, a response command is received from the other party. The signal strength of the other party's port 1 is 0xED = 19dmb, and the status is 00, which means that the other party supports data transmission. Receive: FC 08 02 0B E5 E4 01 ED 00 AA	

8.4.4 Remote query configuration parameters

Remote query configuration parameters		
Function	Remotely query the configuration parameters of the other device, support broadcast query or multicast query, one command queries multiple devices, and the query results are received in asynchronous commands.	
Format	enter	return
	FE 07 02 00 dst_addr dst_ep attr_id AA	FB 04 02 00 rf_status AA

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td>parameter</td><td>
Enter the command parameters:
dst_addr: destination address, 2 bytes, LSB little endian format. In multicast mode, the destination address is the LSB little endian format of the group number.
<table>
<tr><td>dst_addr (HEX format)</td><td>Destination address sending method</td></tr>
<tr><td>00 00 ~ F7 FF</td><td>Unicast mode</td></tr>
<tr><td>F8 FF ~ FB FF</td><td>reserve</td></tr>
<tr><td>FC FF</td><td>Broadcast to coordinator, router</td></tr>
<tr><td>FD FF</td><td>Broadcast to coordinators, routers, and end nodes (non-sleeping)</td></tr>
<tr><td>FF FF</td><td>Broadcast to all devices, including dormant terminals</td></tr>
</table>
dst_ep: destination port, 1 byte
<table>
<tr><td>dst_ep (HEX format)</td><td>Destination port sending mode</td></tr>
<tr><td>00</td><td>Multicast</td></tr>
<tr><td>01</td><td>Unicast</td></tr>
<tr><td>02 ~ FE</td><td>reserve</td></tr>
<tr><td>FF</td><td>Port Broadcast</td></tr>
</table>
attr_id: The configuration parameter code to be queried, 2 bytes, LSB little endian format. This configuration item is the same as the configuration item in the AT command.
<table>
<tr><td>addr_id (HEX format)</td><td>Corresponding parameters</td></tr>
<tr><td>00 00</td><td>Serial port mode configuration (baud rate, stop bit, parity bit)</td></tr>
<tr><td>01 00</td><td>Transparent target address</td></tr>
<tr><td>02 00</td><td>Transparent transmission target port</td></tr>
<tr><td>03 00</td><td>Transmission Mode</td></tr>
<tr><td>04 00</td><td>Sleep Mode</td></tr>
<tr><td>06 00</td><td>Custom number</td></tr>
</table>
</td></tr>
<tr><td></td><td>
Returns the command's parameters:
rf_status: Send result
<table>
<tr><td>rf_status (HEX format)</td><td>Send results</td></tr>
<tr><td>00</td><td>Send successfully</td></tr>
<tr><td>01</td><td>Send invalid</td></tr>
<tr><td>10~13</td><td>Module memory overflow (input data speed exceeds wireless transmission speed)</td></tr>
<tr><td>B7</td><td>Data retransmission failed (response mode 1, return command delay increased, about 18 seconds)</td></tr>
<tr><td>C2</td><td>The module is not connected to the Internet or is offline.</td></tr>
<tr><td>CD</td><td>The destination does not exist</td></tr>
<tr><td>E1</td><td>The data packet is interfered by other wireless signals</td></tr>
<tr><td>E9</td><td>Data packet loss</td></tr>
<tr><td>F0</td><td>The data sent to the dormant terminal has timed out.</td></tr>
<tr><td>Other values</td><td>Unknown error</td></tr>
</table>
</td></tr>
<tr><td>Notes</td><td>Parameters of command class = 01 in HEX command support remote query</td></tr>
<tr><td>Command Examples</td><td>Broadcast query network all modules target short address
Send command: FE 08 02 00 FF FF FF 01 00 AA
Return command: FB 04 02 00 00 AA</td></tr>
</table>

8.4.5 Receive remote query configuration parameters

<table>
<tr><td colspan="2">Receive remote query configuration parameters</td></tr>
<tr><td>Function</td><td>After sending the remote query command, the query result is received. For broadcast or multicast query, multiple query results may be received at the same time.</td></tr>
<tr><td rowspan="2">Format</td><td>Asynchronous reception</td></tr>
<tr><td>FC len 02 00 src_addr src_ep rx_rssi attr_id data_type attr_data AA</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td>parameter</td><td>Parameters for asynchronous commands:
len: frame length occupies one byte, and the frame length is determined by the entire command parameter

src_addr: source address, 2 bytes, LSB little endian format.

dst_ep: source port, 1 byte.

rx_rssi: data signal strength, 1 byte, converted to singed char format and then converted, for example, FF is converted to -1dmb.

attr_id: The configuration parameter code to be queried, 2 bytes, LSB little endian format. This configuration item is the same as the configuration item in the AT command.
<table>
<tr><td>addr_id (HEX format)</td><td>Corresponding parameters</td></tr>
<tr><td>00 00</td><td>Serial port mode configuration (baud rate, stop bit, parity bit)</td></tr>
<tr><td>01 00</td><td>Transparent target address</td></tr>
<tr><td>02 00</td><td>Transparent transmission target port</td></tr>
<tr><td>03 00</td><td>Transmission Mode</td></tr>
<tr><td>04 00</td><td>Sleep Mode</td></tr>
<tr><td>06 00</td><td>Custom number</td></tr>
</table>
data_type: data type, 1 byte, corresponding to the data size of the configuration parameter.
<table>
<tr><td>data_type</td><td>Data Types</td><td>Data size (bytes)</td></tr>
<tr><td>20</td><td>uint8</td><td>1</td></tr>
<tr><td>twenty one</td><td>uint16</td><td>2</td></tr>
<tr><td>twenty two</td><td>uint24</td><td>3</td></tr>
<tr><td>twenty three</td><td>uint32</td><td>4</td></tr>
</table>
attr_data: configuration parameter value, the data size is determined by data_type</td></tr>
<tr><td>Notes</td><td>none</td></tr>
<tr><td>Command Examples</td><td>Receive the query result returned by the 0xE4E5 device. The data type of the query parameter 0x0001 (transmitted target address) is 0x21 (uint16 type) and the value is 0xFFFF.
Receive command: FC 0C 02 00 E5 E4 01 EE 01 00 twenty one FF FF AA</td></tr>
</table>

8.4.6 Receiving Heartbeat Packets

<table>
<tr><td colspan="2">Receive heartbeat packets</td></tr>
<tr><td>Function</td><td>The coordinator receives the node heartbeat packet</td></tr>
<tr><td rowspan="2">Format</td><td>Asynchronous reception</td></tr>
<tr><td>FC len 02 0A src_addr src_ep rx_rssi attr_id data_type attr_data AA</td></tr>
<tr><td>parameter</td><td>Parameters for asynchronous commands:
len: frame length occupies one byte, and the frame length is determined by the entire command parameter

src_addr: source address, 2 bytes, LSB little endian format.

dst_ep: source port, 1 byte.

rx_rssi: data signal strength, 1 byte, converted to singed char format and then converted, for example, FF is converted to -1dmb.

attr_id: The configuration parameter code to be queried, 2 bytes, LSB little endian format. This configuration item is the same as the configuration item in the AT command.
<table>
<tr><td>addr_id (HEX format)</td><td>Corresponding parameters</td></tr>
<tr><td>00 00</td><td>Serial port mode configuration (baud rate, stop bit, parity bit)</td></tr>
<tr><td>01 00</td><td>Transparent target address</td></tr>
</table></td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	02 00 — Transparent transmission target port 03 00 — Transmission Mode 04 00 — Sleep Mode 06 00 — Custom number data_type: data type, 1 byte, corresponding to the data size of the configuration parameter. data_type / Data Types / Data size (bytes): 20 / uint8 / 1 twenty one / uint16 / 2 twenty two / uint24 / 3 twenty three / uint32 / 4 attr_data: configuration parameter value, the data size is determined by data_type
Notes	none
Command Examples	The heartbeat packet of the 0xECFF device is received. The heartbeat packet carries parameter 0x0006 (custom number) with a data type of 0x20 (uint8) and a value of 0xFF. Receive command: FC 0B 02 00 FF EC 01 E0 06 00 20 FF AA

8.4.7 Remotely modify configuration parameters

Remote query configuration parameters		
Function	Remotely query the configuration parameters of the other device, support broadcast query or multicast query, one command queries multiple devices, and the query results are received in asynchronous commands.	
Format	enter: FE len 02 01 dst_addr dst_ep attr_id data_type attr_data AA	return: FB 04 02 01 rf_status AA
parameter	**Enter the command parameters:** len: Command length is determined by attr_data dst_addr: destination address, 2 bytes, LSB little endian format. In multicast mode, the destination address is the LSB little endian format of the group number. dst_addr (HEX format) / Destination address sending method: 00 00 ~ F7 FF — Unicast mode F8 FF ~ FB FF — reserve FC FF — Broadcast to coordinator, router FD FF — Broadcast to coordinators, routers, and end nodes (non-sleeping) FF FF — Broadcast to all devices, including dormant terminals dst_ep: destination port, 1 byte dst_ep (HEX format) / Destination port sending mode: 00 — Multicast 01 — Unicast 02 ~ FE — reserve FF — Port Broadcast attr_id: the configuration parameter code to be modified, 2 bytes, LSB little endian format, this configuration item is the same as the configuration item in the AT command. data_type: data type, 1 byte, corresponding to the data size of the configuration parameter. data_type / Data Types / Data size (bytes): 20 / uint8 / 1 twenty one / uint16 / 2	

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

twenty two	uint24	3
twenty three	uint32	4

attr_data: Configuration parameter value, see table

Remotely modify the configuration parameter command attr_id, data_type and the corresponding attr_data value range

Parameter name	attr_id	data_type	attr_data value range
Serial port mode configuration (baud rate, stop bit, parity bit)	00 00	uint24	attr_data[0] = [0:7] attr_data[1] = [0:1] attr_data[2] = [0:2]
Transparent target address	01 00	uint16	0x0000~0xFFFF (little endian format)
Transparent transmission target port	02 00	uint8	0x00~0xFF
Transmission Mode	03 00	uint8	0x00~0x04
Sleep Mode	04 00	uint8	0x00~0x06 or 0x3C
Custom number	06 00	uint8	0x00~0xFF

Returns the command's parameters:

rf_status: Send result

rf_status (HEX format)	Send results
00	Send successfully
01	Send invalid
10~13	Module memory overflow (input data speed exceeds wireless transmission speed)
B7	Data retransmission failed (response mode 1, return command delay increased, about 18 seconds)
C2	The module is not connected to the Internet or is offline.
CD	The destination does not exist
E1	Data packets are interfered by other wireless signals
E9	Data packet loss
F0	The data sent to the dormant terminal has timed out.
Other values	Unknown error

Notes	The parameters of command class = 01 in the HEX command support remote query.
Command Examples	Broadcast sets the target short address of all modules in the network to 0x0000 Send command: FE 08 02 01 FF FF FF 01 00 twenty one 00 00 AA Return command: FB 04 02 01 00 AA

8.4.8 Remote Configuration Parameter Response

HEX command receiving response command	
Function	Receive response commands for modifying configuration parameters. When broadcasting modifications, modification commands returned by multiple devices will be received.
Format	Asynchronous reception FC len 02 01 src_addr src_ep rx_rssi status attr_id AA
parameter	**Parameters for asynchronous commands:** len: frame length = 08 or 0A. src_addr: source address, 2 bytes, LSB little endian format. dst_ep: source port, 1 byte. rx_rssi: data signal strength, 1 byte, converted to singed char format and then converted, for example, FF is converted to -1dmb. status: response status, 1 byte, used to determine whether the other device supports the data transmission function.

status（HEX）	Status description

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

<table>
<tr><td></td><td>
<table>
<tr><td>00</td><td>Modification successful</td></tr>
<tr><td>86</td><td>Parameter number does not exist</td></tr>
<tr><td>87</td><td>The parameter data range is incorrect</td></tr>
<tr><td>88</td><td>This parameter is read-only.</td></tr>
<tr><td>8D</td><td>data_type error</td></tr>
<tr><td>other</td><td>Modification failed for unknown reason</td></tr>
</table>
attr_id: configuration parameter number. If the modification fails, the response command will contain the parameter number.
</td></tr>
<tr><td>Notes</td><td>If a response command with a status other than 00 is received, it is possible that other illegal devices have entered the network. The probability of this occurring is extremely low.</td></tr>
<tr><td>Command Examples</td><td>The device with address 0xE4E5 returns the message that the parameters have been modified successfully.
Receive: FC 08 02 01 E5 E4 01 ED 00 AA</td></tr>
</table>

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9 User Notice


9.1 ZigBee network roles and considerations

Serial number	describe
1	This module adopts ZigBee network, which consists of a coordinator and any other devices (routers and terminals).
2	It has self-organization, self-routing, and network multi-hop functions. (The default supported network depth is 30, the total number of sub-nodes is 20, and the number of sub-routing nodes is 6)
3	The parent node devices (coordinator and router) can save data for dormant terminals for 7 seconds.
4	Only the terminal device has the sleep function. The sleep time can be set by the user. The maximum is 60 seconds. The default is 1, which means waking up once every 1 second . Since the parent node only saves 7 seconds, it will never wake up when it is set to 0 seconds. If it is set to more than 6 seconds, it will always wake up every 60 seconds. Setting it to 0 or 60 can be regarded as giving up data reception, pursuing the ultimate low power consumption.
5	ShortAddress communication is used for network communication. Note: The short address is randomly assigned when the device joins the network. The device MacAddress long address is unique and fixed. If you don't know the short address, you can use the corresponding instructions to find the ShortAddress in the network based on the MacAddress , and then conduct point-to-point communication.
6	The coordinator is unique in the network and its short address is fixed to 0000.
7	If the on-demand address is FFFF, FFFD, or FFFC, it corresponds to three broadcast modes respectively.
8	When the network parameter PANID is FFFF, it is automatically assigned. If the device PANID is different, networking cannot be achieved.
9	The network key is randomly generated by the coordinator each time it is restored to factory settings. Routers and terminals cannot set keys. The key of the coordinator to which they join is used.
10	All devices in the network have the broadcast function turned on. Multiple devices broadcasting at the same time or a single device broadcasting at a high frequency may cause serious network congestion. Please try to avoid this situation.
11	The module does not need to join the group when multicasting. It can directly multicast to any group according to the communication method. A module can join multiple multicasts at the same time, and the local group number will not change due to different multicast numbers.
12	After entering sleep mode, the device can be awakened through the serial port or through the wake-up pin. Note: In sleep mode, the first frame of data after the serial port wakes up is invalid. It is recommended that the first frame of data be a single byte 00, and the subsequent data be sent within 5ms~100ms.
13	a ZigBee network , the transmission cycle of a single packet of data cannot be too fast (generally recommended to be more than 1 second), as this may cause data loss. (Pay special attention to the fact that if there are too many nodes in the network, a too fast broadcast cycle may cause network instability.)

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.2 Network structure

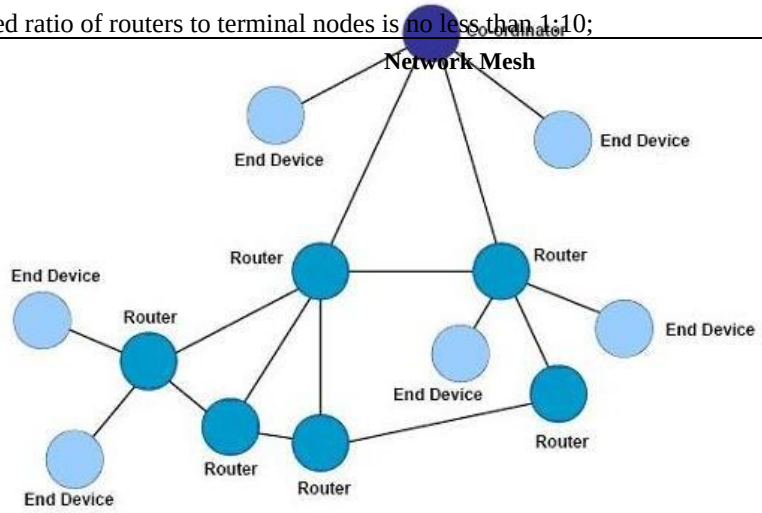The network structure of this module is a mesh network structure (MESH)
The network with MESH topology has powerful functions, and the network can communicate through "multi-hop"; This topology can also form an extremely complex network; the network also has self-organization and self-healing functions; The recommended ratio of routers to terminal nodes is no less than 1:10;


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

10 Hardware Design

- It is recommended to use a DC regulated power supply to power the module. The power supply ripple coefficient should be as small as possible and the module should be reliably grounded.
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module.
- Please check the power supply to ensure that it is within the recommended power supply voltage. If it exceeds the maximum value, the module will be permanently damaged.
- Please check the stability of the power supply. The voltage should not fluctuate greatly or frequently.
- When designing the power supply circuit for the module, it is often recommended to retain more than 30% margin, which is conducive to long-term stable operation of the whole machine;
- The module should be kept as far away as possible from parts with large electromagnetic interference, such as power supplies, transformers, and high-frequency wiring;
- High-frequency digital routing, high-frequency analog routing, and power routing must avoid the bottom of the module. If it is necessary to pass under the module, assuming that the module is soldered on the Top Layer, ground copper should be laid on the Top Layer of the module contact part (all copper should be laid and well grounded), and the routing must be close to the digital part of the module and on the Bottom Layer;
- Assuming the module is soldered or placed on the Top Layer, it is also wrong to randomly route the wires on the Bottom Layer or other layers, which will affect the module's spurious signal and receiving sensitivity to varying degrees;
- If there are devices with large electromagnetic interference around the module, it will also greatly affect the performance of the module. It is recommended to keep them away from the module according to the intensity of the interference. If possible, appropriate isolation and shielding can be performed.
- If there are traces with large electromagnetic interference around the module (high-frequency digital, high-frequency analog, power traces), it will also greatly affect the performance of the module. It is recommended to keep them away from the module according to the intensity of the interference. If possible, appropriate isolation and shielding can be performed.
- If the communication line uses 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some TTL protocols whose physical layer is also 2.4GHz, such as USB3.0;
- The antenna installation structure has a great impact on the performance of the module. Make sure the antenna is exposed and preferably vertically upward. When the module is installed inside the housing, use a high-quality antenna extension cable to extend the antenna to the outside of the housing.
- The antenna must not be installed inside a metal shell, as this will greatly reduce the transmission distance.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

11 Frequently Asked Questions

11.1 The transmission distance is not ideal

- When there is a straight-line communication obstacle, the communication distance will be attenuated accordingly;
- Temperature, humidity, and co-channel interference can increase the communication packet loss rate;
- The ground absorbs and reflects radio waves, so the test results are poor when close to the ground;
- Seawater has a strong ability to absorb radio waves, so the test effect at the seaside is poor;
- If there are metal objects near the antenna, or the antenna is placed in a metal shell, the signal attenuation will be very serious;
- The power register is set incorrectly, or the air rate is set too high (the higher the air rate, the closer the distance);
- The power supply voltage at room temperature is lower than the recommended value. The lower the voltage, the lower the power output.
- The antenna used does not match the module well or the antenna itself has quality issues.

11.2 Module is easily damaged

- Please check the power supply to ensure that it is within the recommended power supply voltage. If it exceeds the maximum value, the module will be permanently damaged.
- Please check the stability of the power supply. The voltage should not fluctuate greatly or frequently.
- Please ensure anti-static operation during installation and use, as high-frequency components are sensitive to static electricity;
- Please ensure that the humidity is not too high during installation and use, as some components are humidity sensitive devices;
- If there is no special requirement, it is not recommended to use it at too high or too low temperature.

11.3 The bit error rate is too high

- There is interference from the same frequency signal nearby. Stay away from the interference source or change the frequency or channel to avoid interference.
- An unsatisfactory power supply may also cause garbled characters, so the reliability of the power supply must be ensured;
- Extension cables or feeder cables that are of poor quality or are too long can also cause a high bit error rate.
- The default transmission mode is broadcast mode. Broadcast forwarding will cause broadcast storms, so it is changed to unicast transmission.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

12 Welding Operation Instructions

12. 1 Reflow temperature

Profile Feature	Curve characteristics	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Solder Paste	Sn63/Pb37	Sn96.5/Ag3/Cu0.5
Preheat Temperature min (Tsmin)	Minimum preheating temperature	100℃	150℃
Preheat temperature max (Tsmax)	Maximum preheating temperature	150℃	200℃
Preheat Time (Tsmin to Tsmax)(ts)	Warm-up time	60-120 sec	60-120 sec
Average ramp-up rate(Tsmax to Tp)	Average ascent rate	3℃/second max	3℃/second max
Liquid Temperature (TL)	Liquidus temperature	183℃	217℃
Time(tL)Maintained Above(TL)	Time above liquidus	60-90 sec	30-90 sec
Peak temperature (Tp)	Peak temperature	220-235℃	230-250℃
Aveage ramp-down rate（Tp to Tsmax）	Average descent rate	6℃/second max	6℃/second max
Time 25℃ to peak temperature	Time from 25℃ to peak temperature	6 minutes max	8 minutes max

12. 2 Reflow Oven Profile

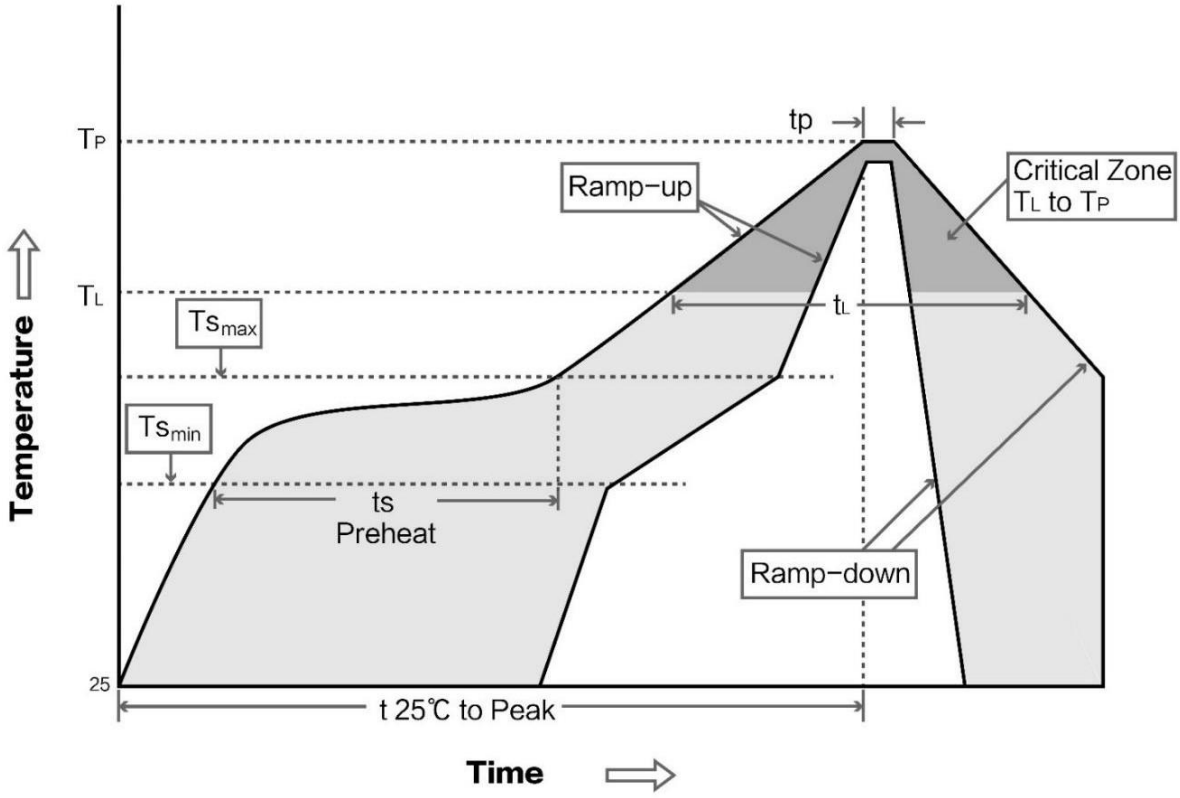


Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

13 Antenna Guide

Product Model	type	Frequency band	Gain	size	Feeder	interface	Features
		Hz	dBi	mm	cm		
TX2400-NP-5010	Flexible Antenna	2.4G	2.0	10x50	-	IPEX	Flexible FPC Soft Antenna
TX2400-JZ-3	Glue stick antenna	2.4G	2.0	30	-	SMA-J	Ultra-short straight, omnidirectional antenna
TX2400-JZ-5	Glue stick antenna	2.4G	2.0	50	-	SMA-J	Ultra-short straight, omnidirectional antenna
TX2400-JW-5	Glue stick antenna	2.4G	2.0	50	-	SMA-J	Fixed bending, omnidirectional antenna
TX2400-JK-11	Glue stick antenna	2.4G	2.5	110	-	SMA-J	Bendable glue stick, omnidirectional antenna
TX2400-JK-20	Glue stick antenna	2.4G	3.0	200	-	SMA-J	Bendable glue stick, omnidirectional antenna
TX2400-XPL-150	Suction cup antenna	2.4G	3.5	150	150	SMA-J	Small suction cup antenna, cost-effective

14 Product Packaging

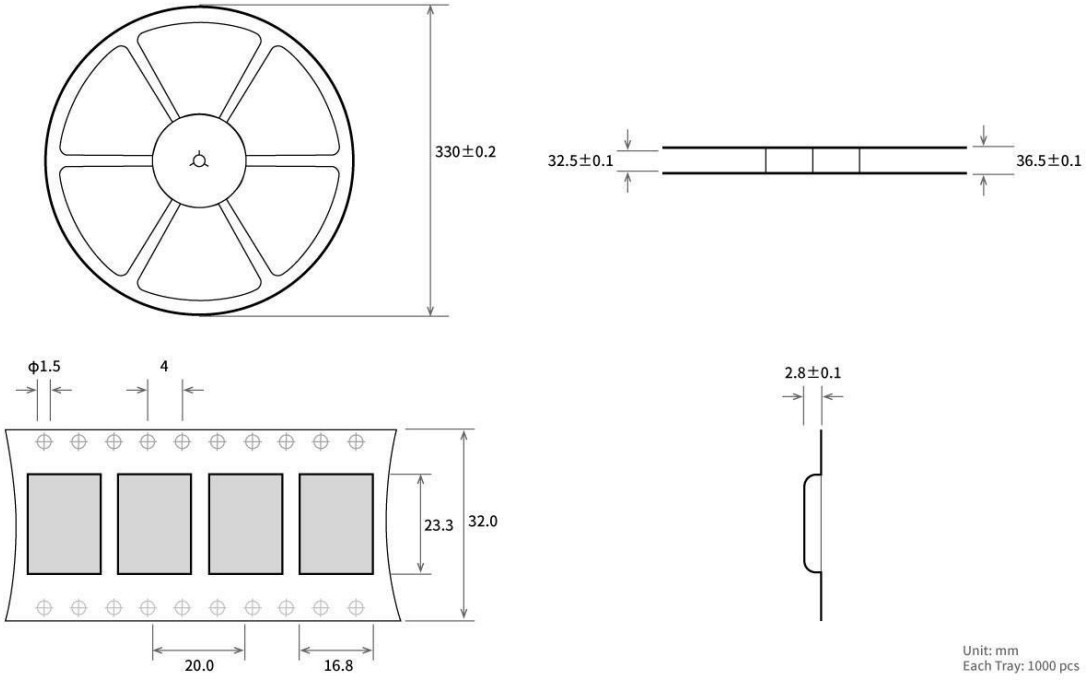

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Version	Revision Date	Revision Notes	Maintainer
1.0	2025-04-02	First edition	Bin
1.1	2025-07-01	Content revision	Bin
1.2	2025-09-22	Content revision	Bin

About Us

Hot line:4000-330-990
Technical support: support@cdebyte.com
Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com
Web: www.cdebyte.com
Address: , Building B2, Mould Industrial Park, 199# Xiqu Ave, High-tech Zone, Chengdu, 611731, Sichuan, China

Chengdu Ebyte Electronic Technology Co.,Ltd.

Copyright © 2012–2025 Chengdu Ebyte Electronic Technology Co., Ltd.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000